

NORDdiffuser

LDC Displacement diffuser


Installation, user and maintenance manual

Table of contents


Dimensions	2
1. Installation in a corner	3
1.1 Installation setup with NRF/NRP 50 silencer and KRI damper	4
2. Measuring airflow	4
3. Maintenance	5

Dimensions


Nominal size	ØD (mm)	A (mm)	B (mm)	H (mm)	C1 (mm)
LDC 125/160	125/160	343	480	693	142
LDC 200/250	200/250	453	635	1093	187
LDC 315/400	315/400	628	883	1593	270

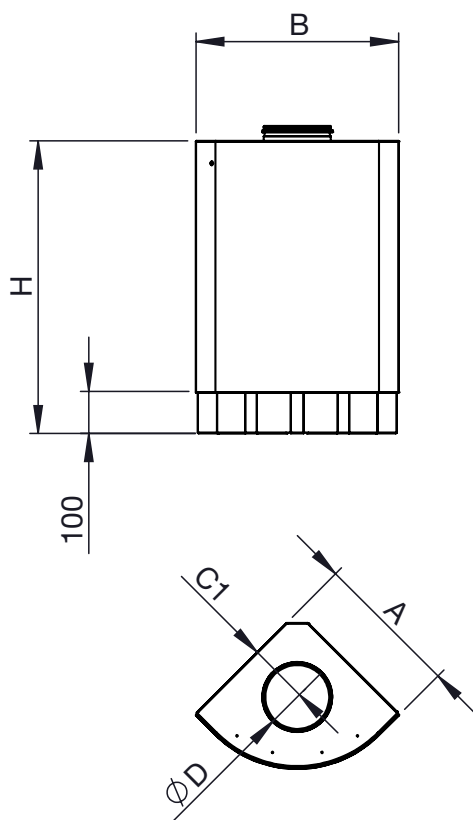


1. Installation in a corner

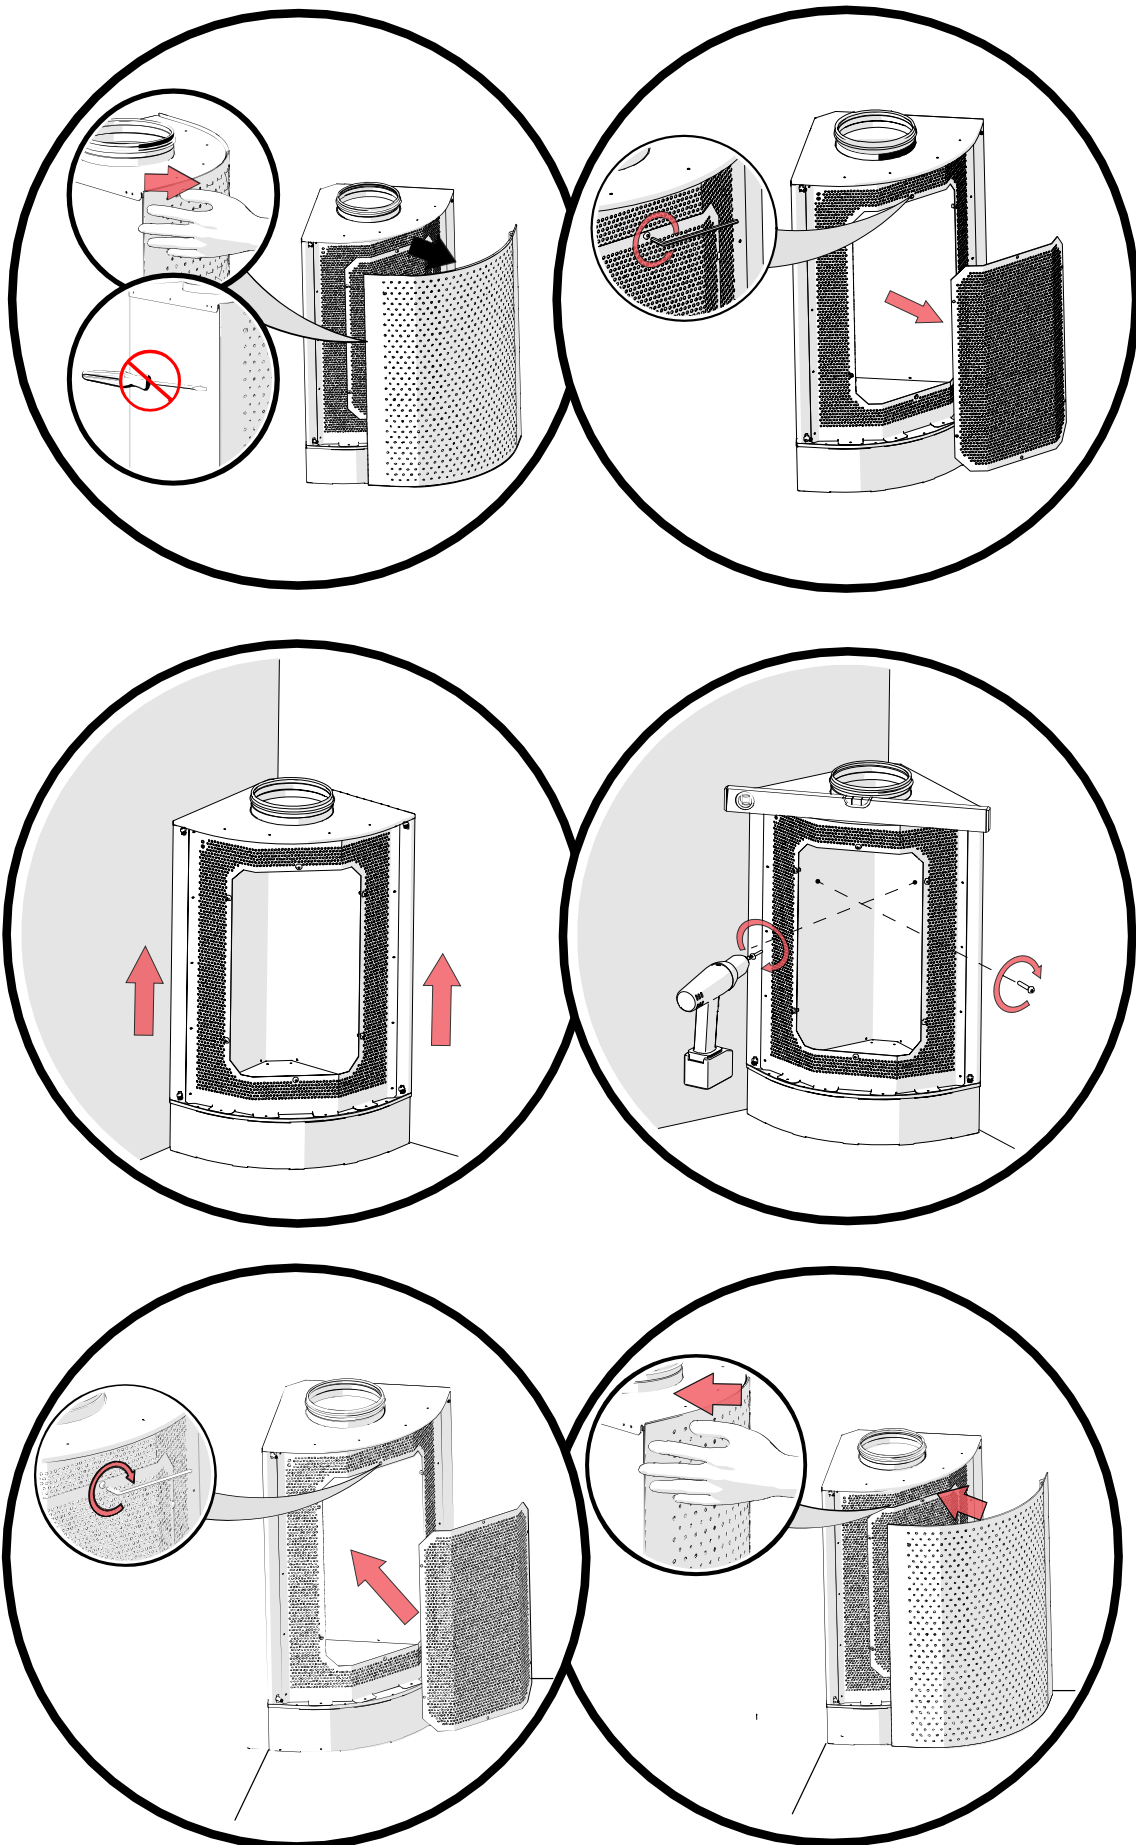



1.1 Installation setup with NRF/NRP 50 silencer and KRI damper


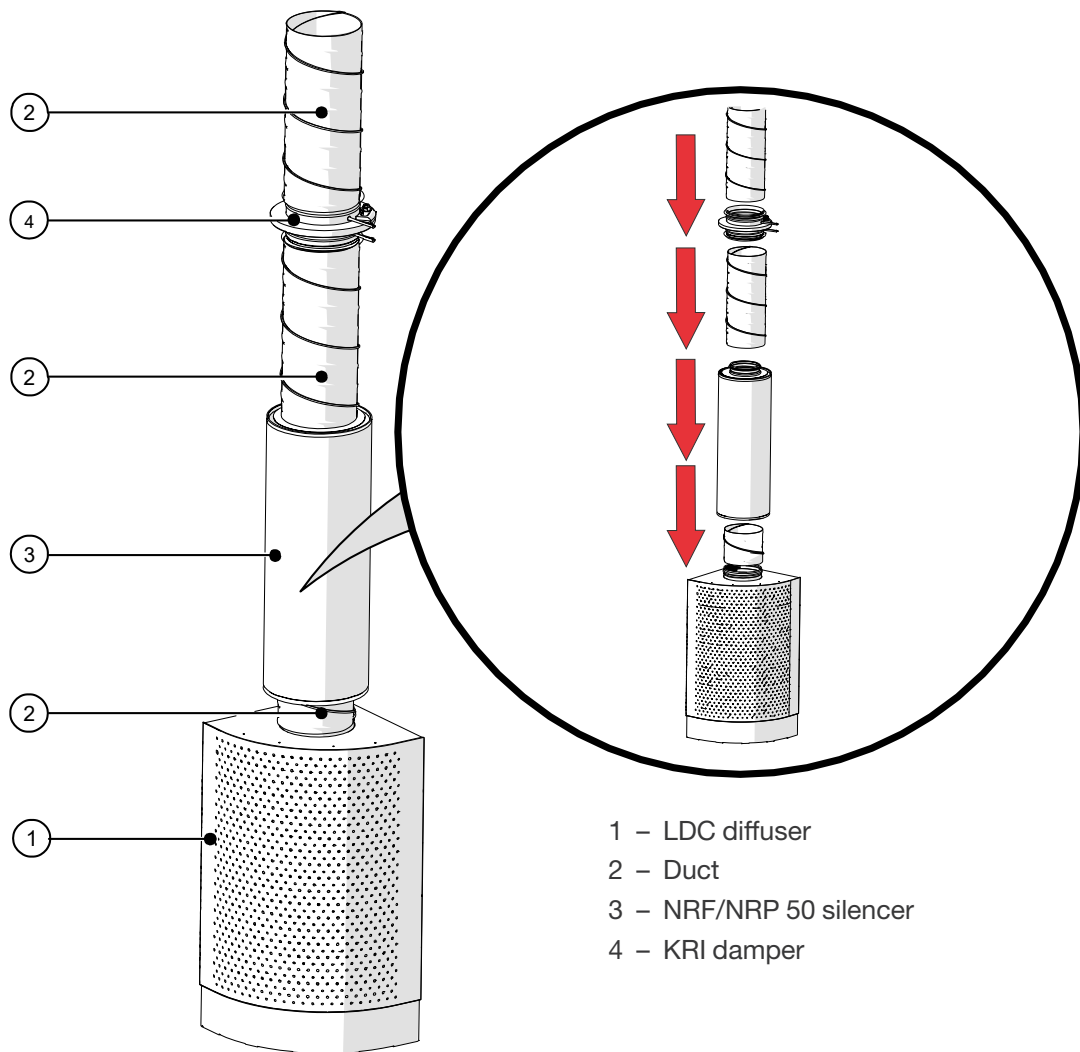



2. Measuring airflow

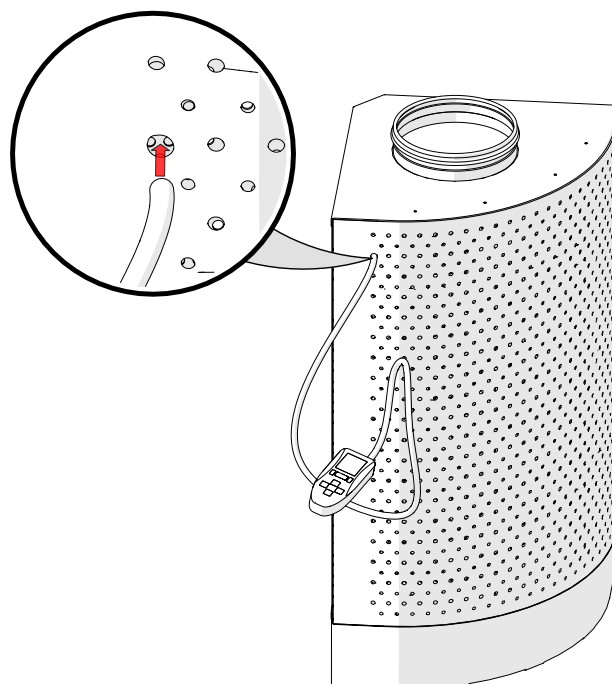

3. Maintenance

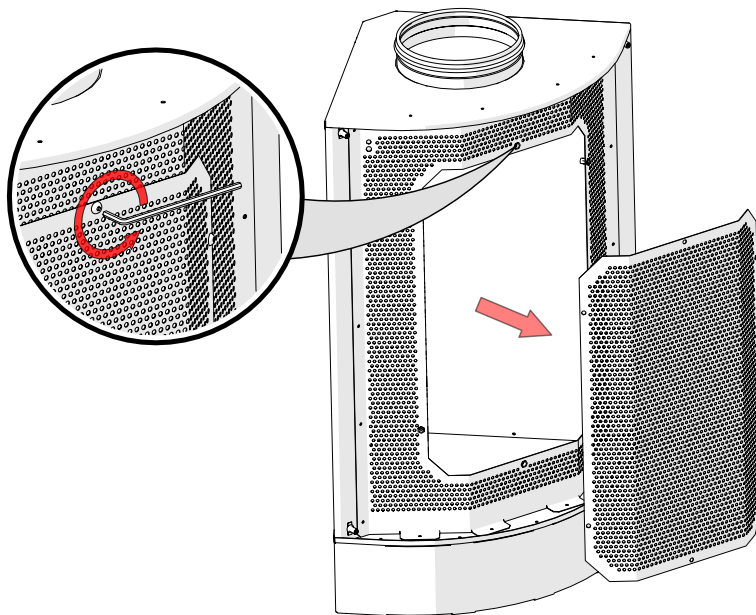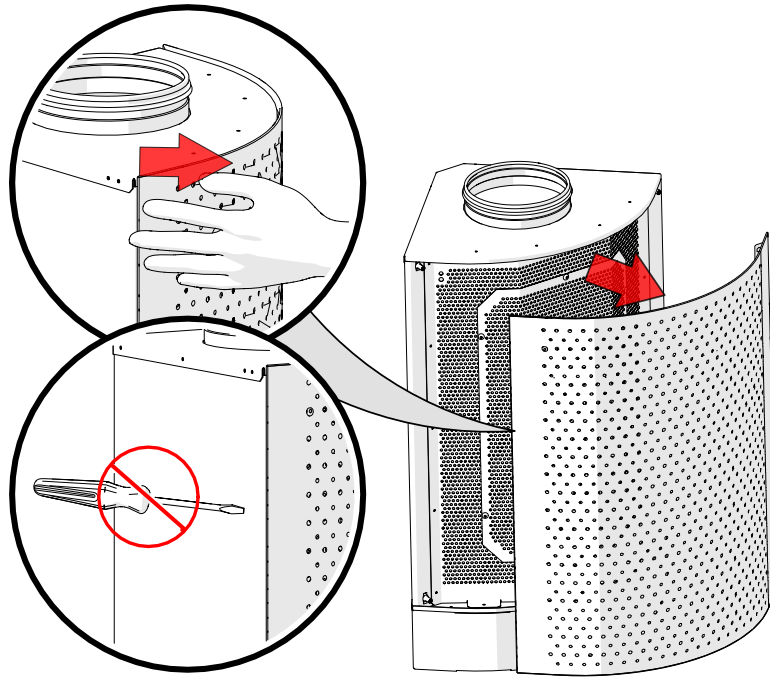

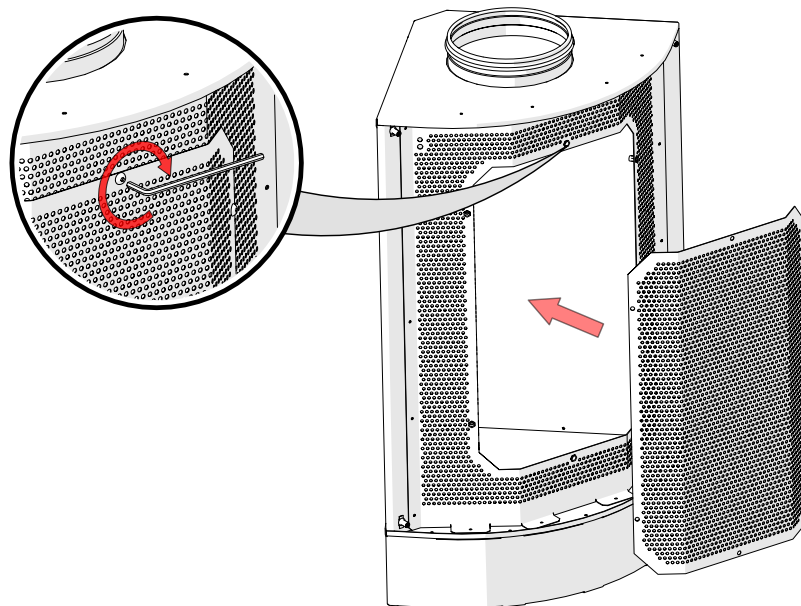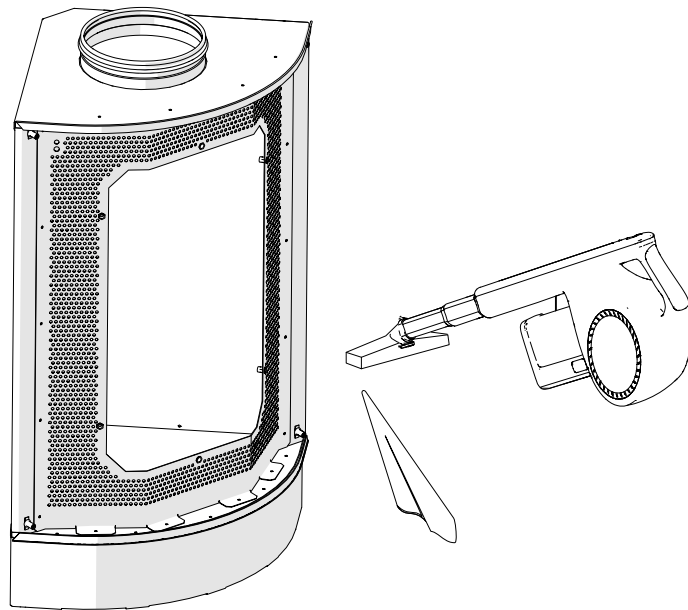

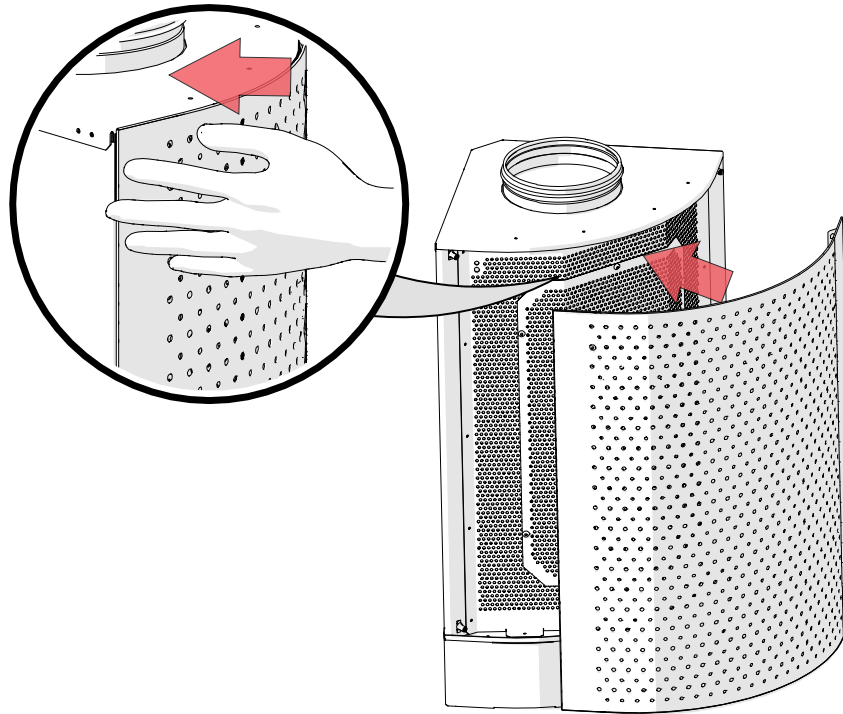



ETS NORD AS

Address: Peterburi tee 53
11415 Tallinn
Estonia

Phone: +372 680 7360

info@etsnord.ee
www.etsnord.ee

ETS NORD Finland

Address: Pakkasraitti 4
04360 Tuusula
Finland

Phone: +358 401 842 842

info@etsnord.fi
www.etsnord.fi

ETS NORD Sweden

Address: Järsjögatan 7
69235 Kumla
Sweden

Phone: +46 19 554 20 50

Address: Pinjegatan 5
21363 Malmö
Sweden

Phone: +46 40-94 68 70


Address: Förrådsvägen 5
151 58 Södertälje
Sweden

Phone: +46 8 550 301 40

info@etsnord.se
www.etsnord.se

ETS NORD International

info@etsnord.com
www.etsnord.com

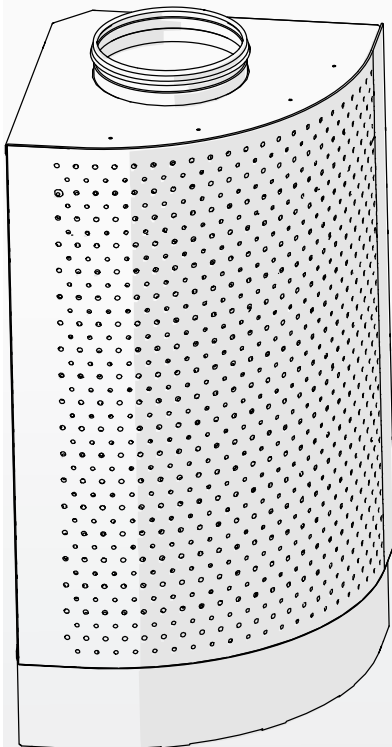

Let's move the air together!