

# NORDdiffuser

LDW Displacement diffuser


Installation, user and maintenance manual

**Table of contents**


Dimensions	2
1. Installation against a wall	3
1.1 Installation setup with NRF/NRP 50 silencer and KRI damper	4
2. Measuring airflow	4
3. Maintenance	5

**Dimensions**


Nominal size	∅D (mm)	A (mm)	B (mm)	H (mm)	C1 (mm)
LDW 125/160	125/160	288	358	693	137
LDW 200/250	200/250	378	448	1093	182
LDW 315/400	315/400	548	598	1593	272

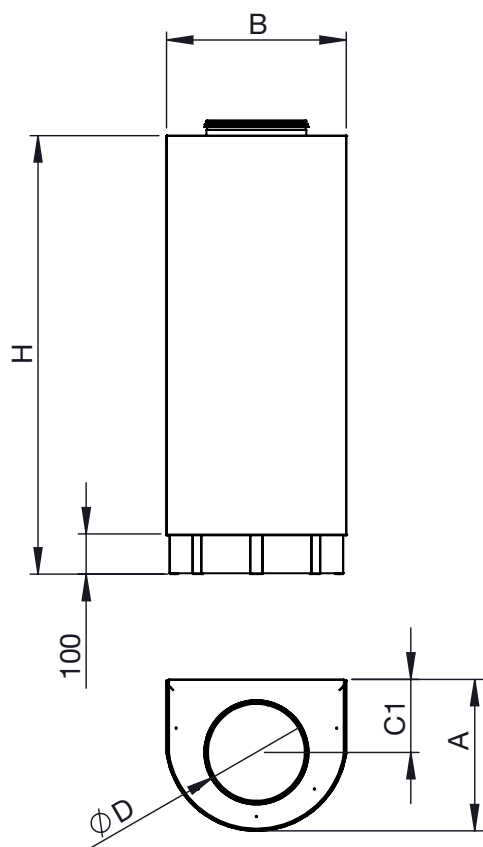


1. Installation against a wall

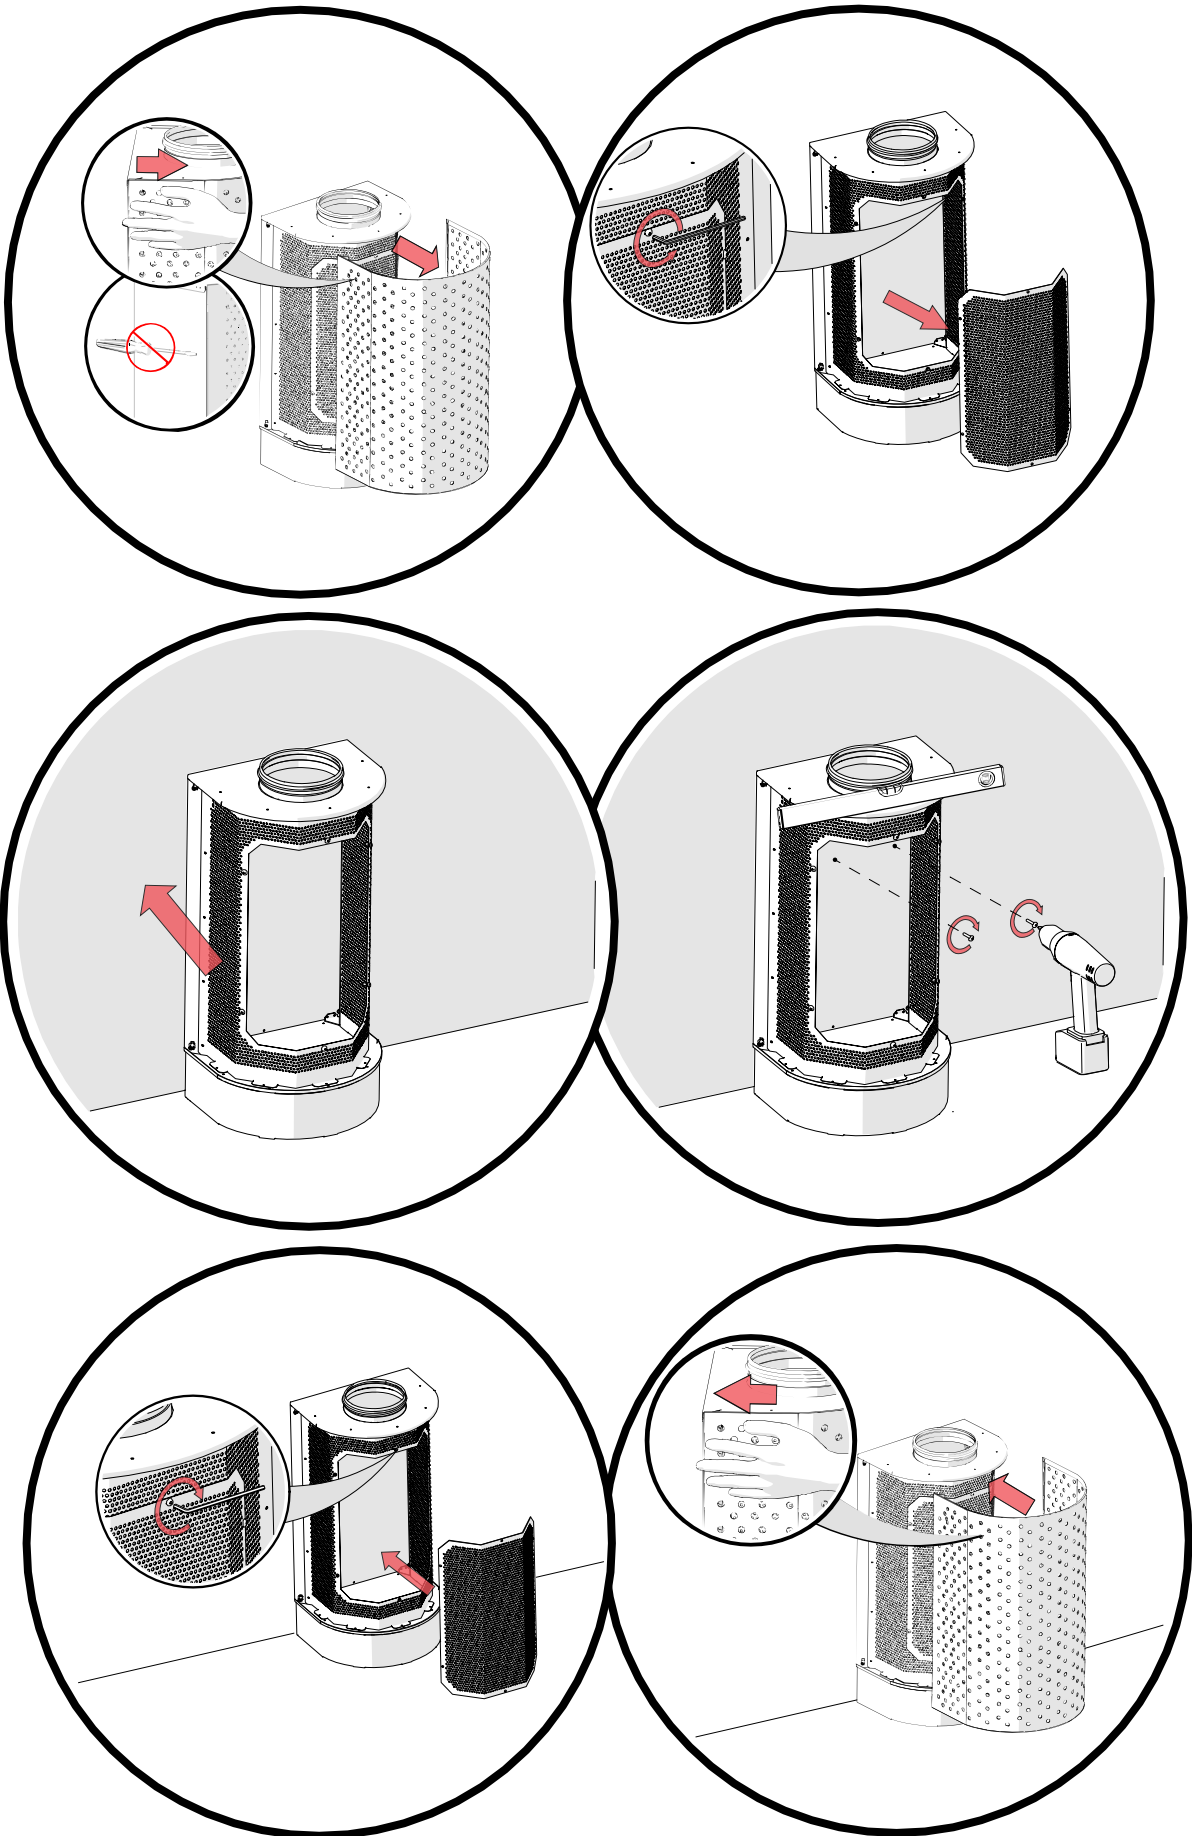



1.1 Installation setup with NRF/NRP 50 silencer and KRI damper


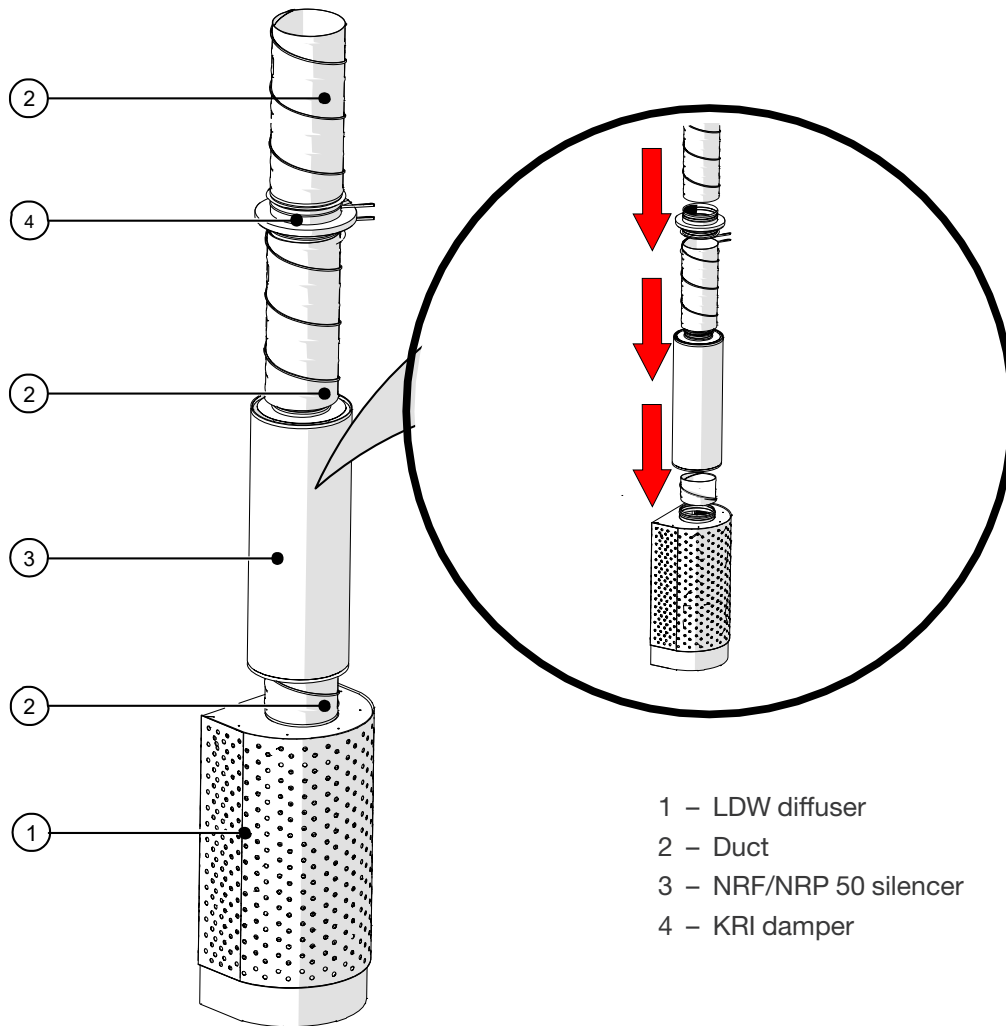



2. Measuring airflow

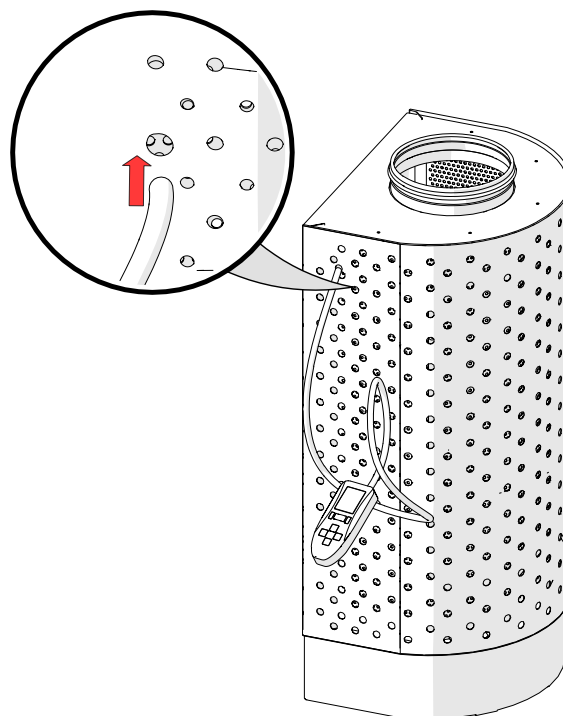

3. Maintenance

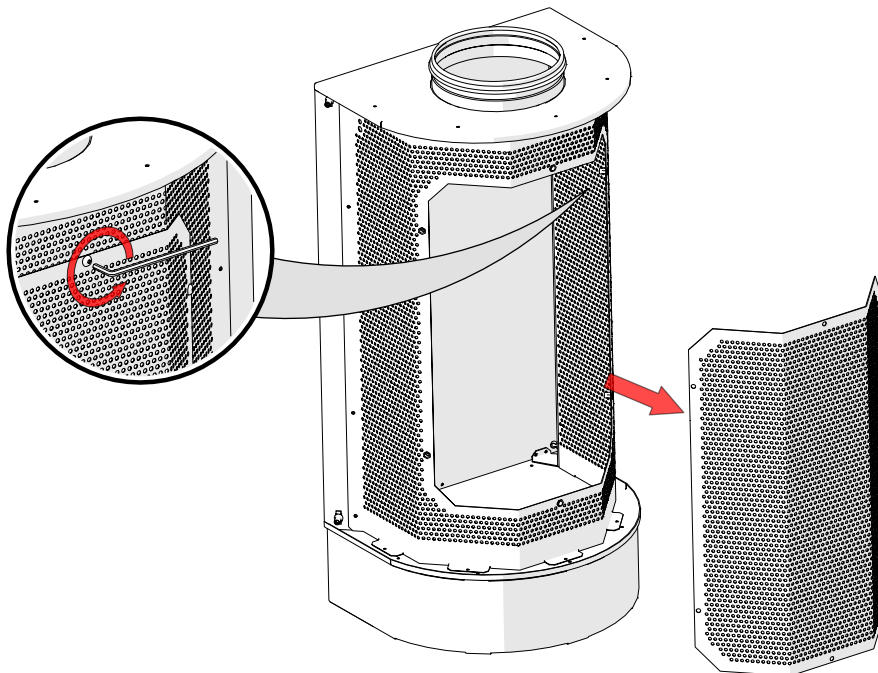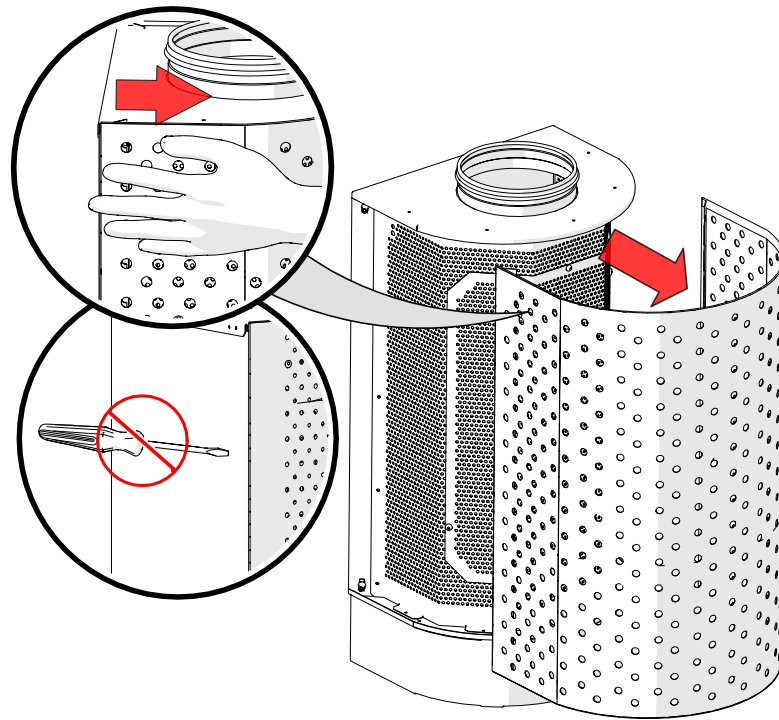

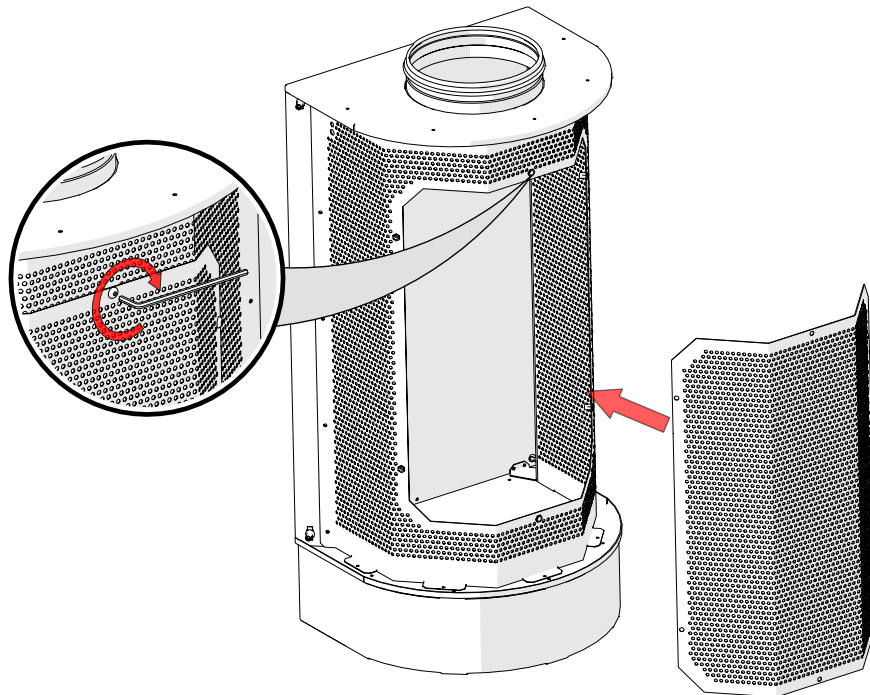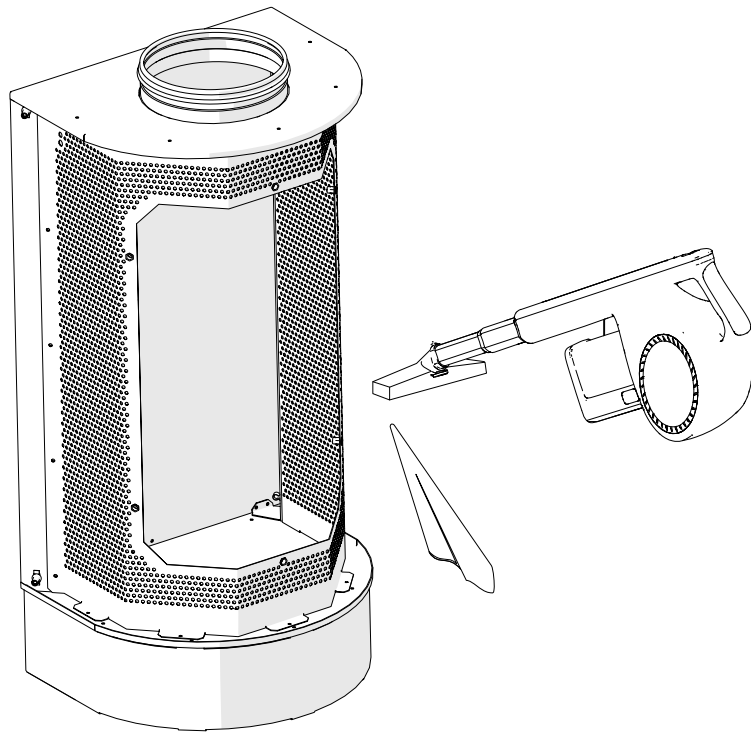

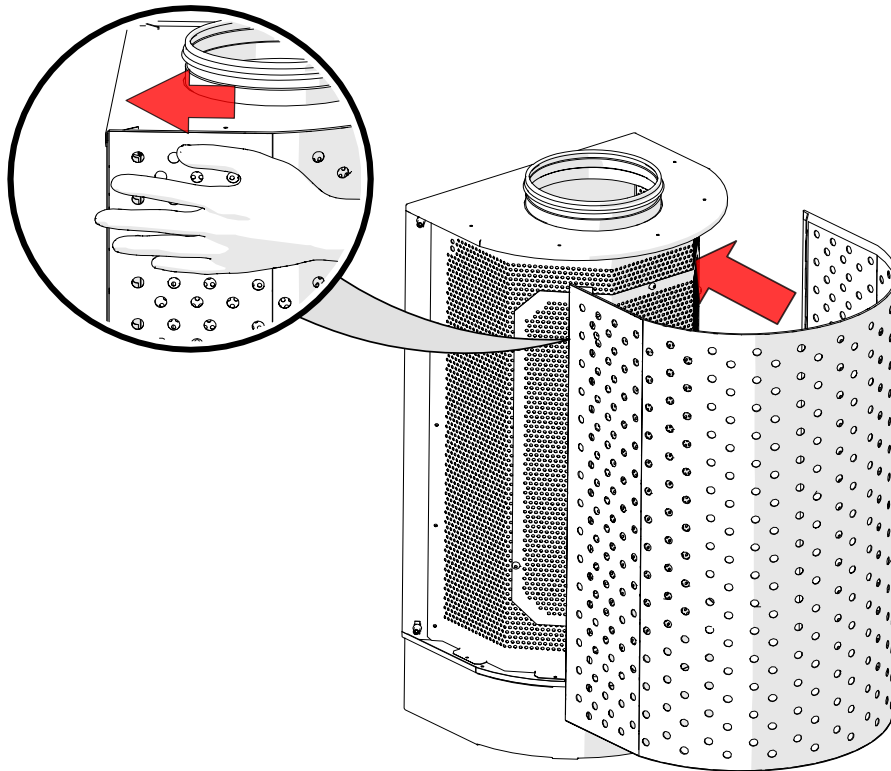



### ETS NORD AS

Address: Peterburi tee 53  
11415 Tallinn  
Estonia

Phone: +372 680 7360

info@etsnord.ee  
www.etsnord.ee

### ETS NORD Finland

Address: Pakkasraitti 4  
04360 Tuusula  
Finland

Phone: +358 401 842 842

info@etsnord.fi  
www.etsnord.fi

### ETS NORD Sweden

Address: Järsjögatan 7  
69235 Kumla  
Sweden

Phone: +46 19 554 20 50

Address: Pinjegatan 5  
21363 Malmö  
Sweden

Phone: +46 40-94 68 70


Address: Förrådsvägen 5  
151 58 Södertälje  
Sweden

Phone: +46 8 550 301 40

info@etsnord.se  
www.etsnord.se

### ETS NORD International

info@etsnord.com  
www.etsnord.com

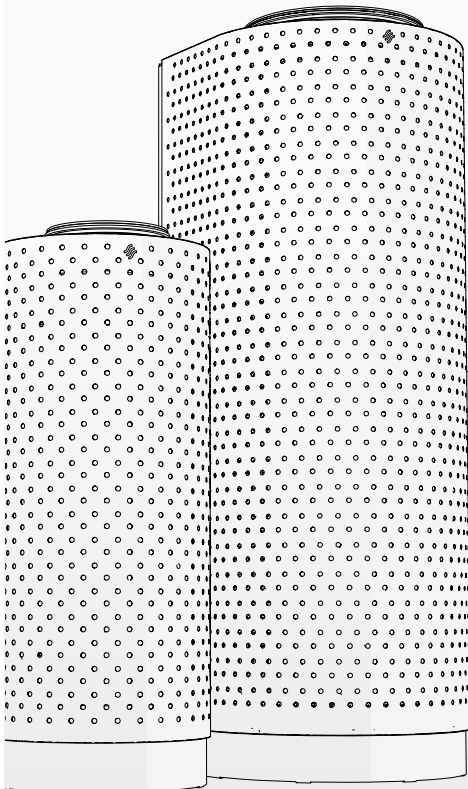

*Let's move the air together!*