


# NORDdiffuser

## DKA Installation Manual


## 1. DKA dimensions

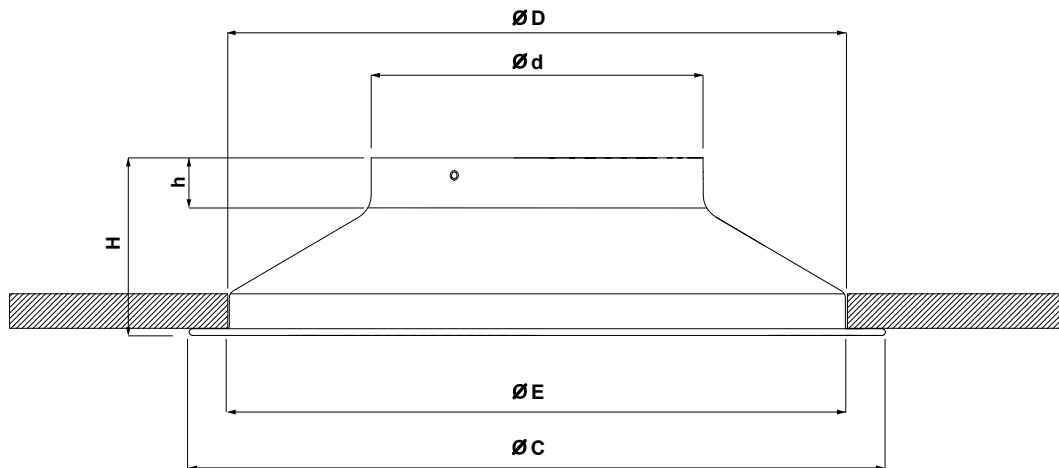


Size	$\varnothing d$	$\varnothing E$	$\varnothing C$	$h$	$H$	$\varnothing D$
160	157	280	335	45	105	288
200	198	360	423	48	118	370
250	248	445	517	48	130	461
315	313	560	640	48	146	576
400	398	680	776	65	185	700
500	498	805	917	65	185	825
630	628	943	1045	65	185	963

## 2. Installation


### 2.1 Connecting to duct

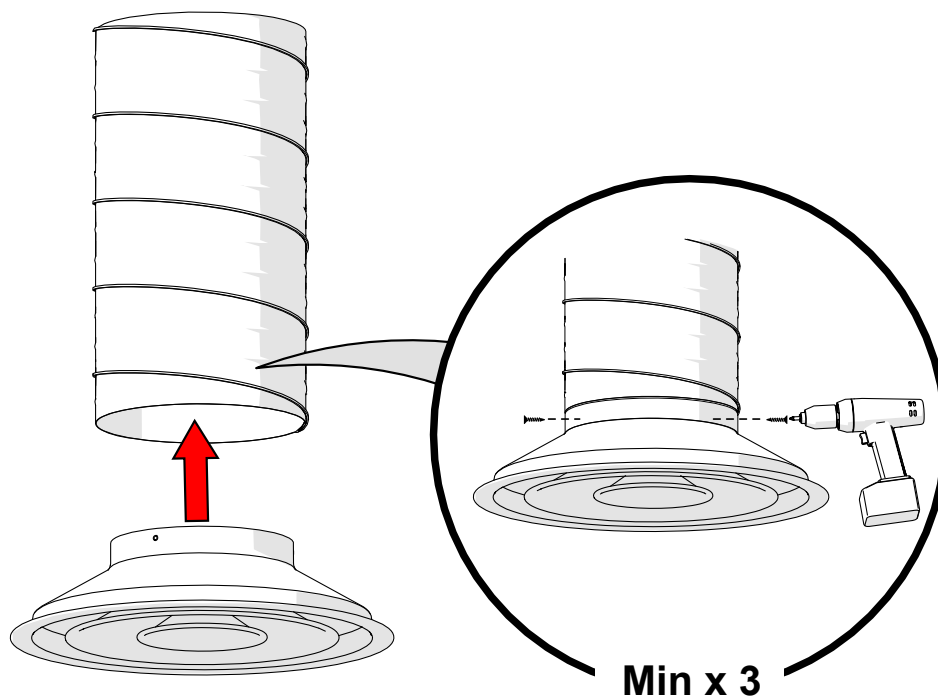


2.2 Connecting to KRI damper

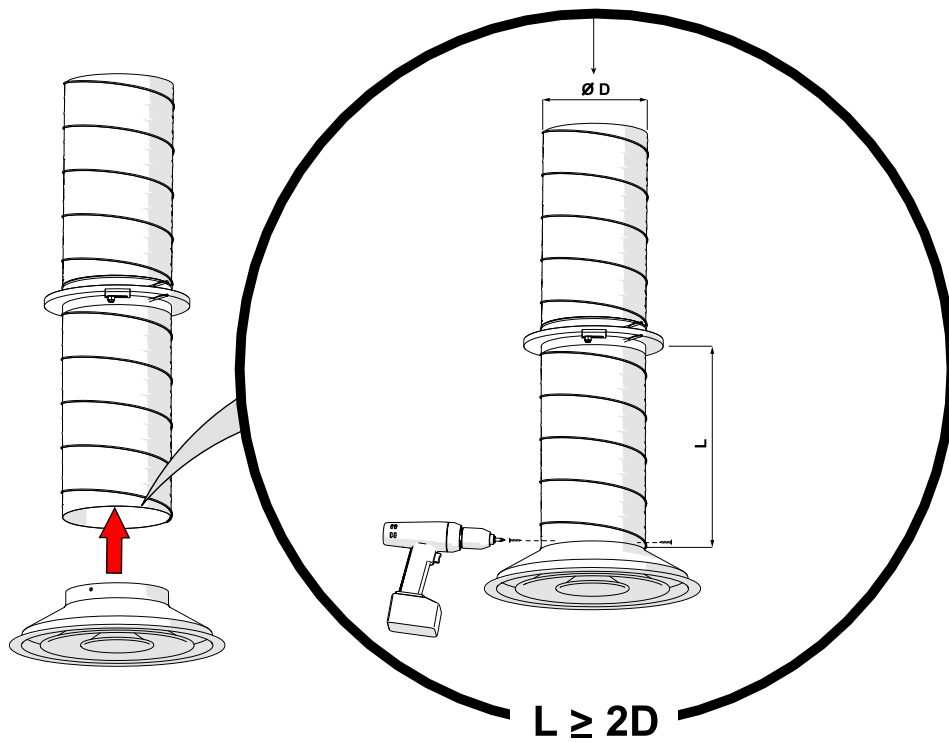


2.3 Connecting to plenum

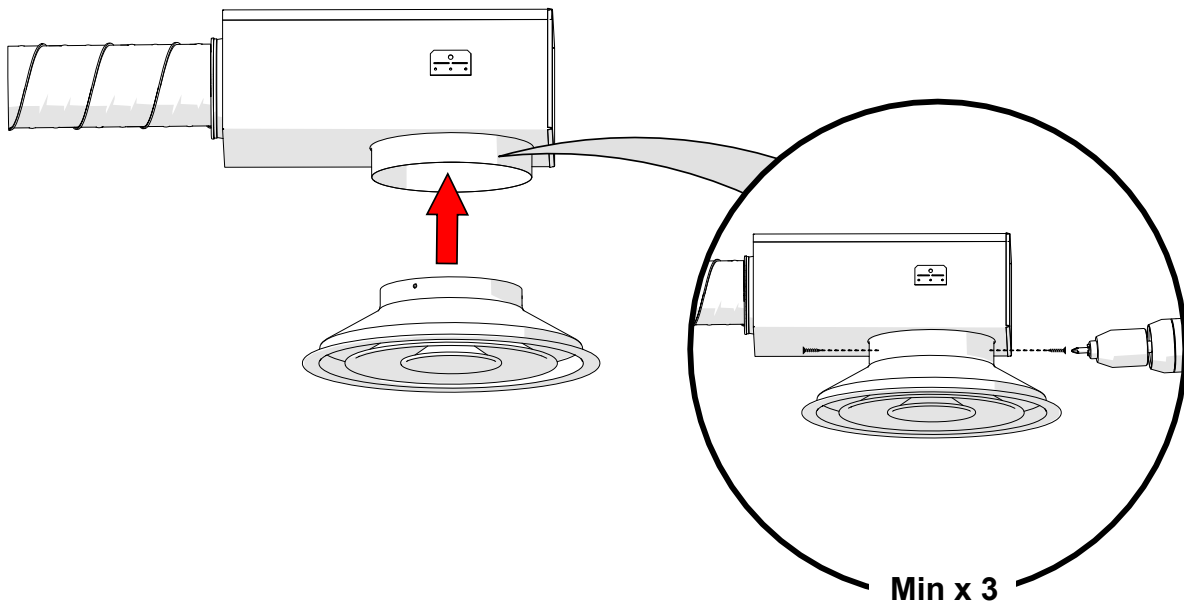


### 3. Adjusting

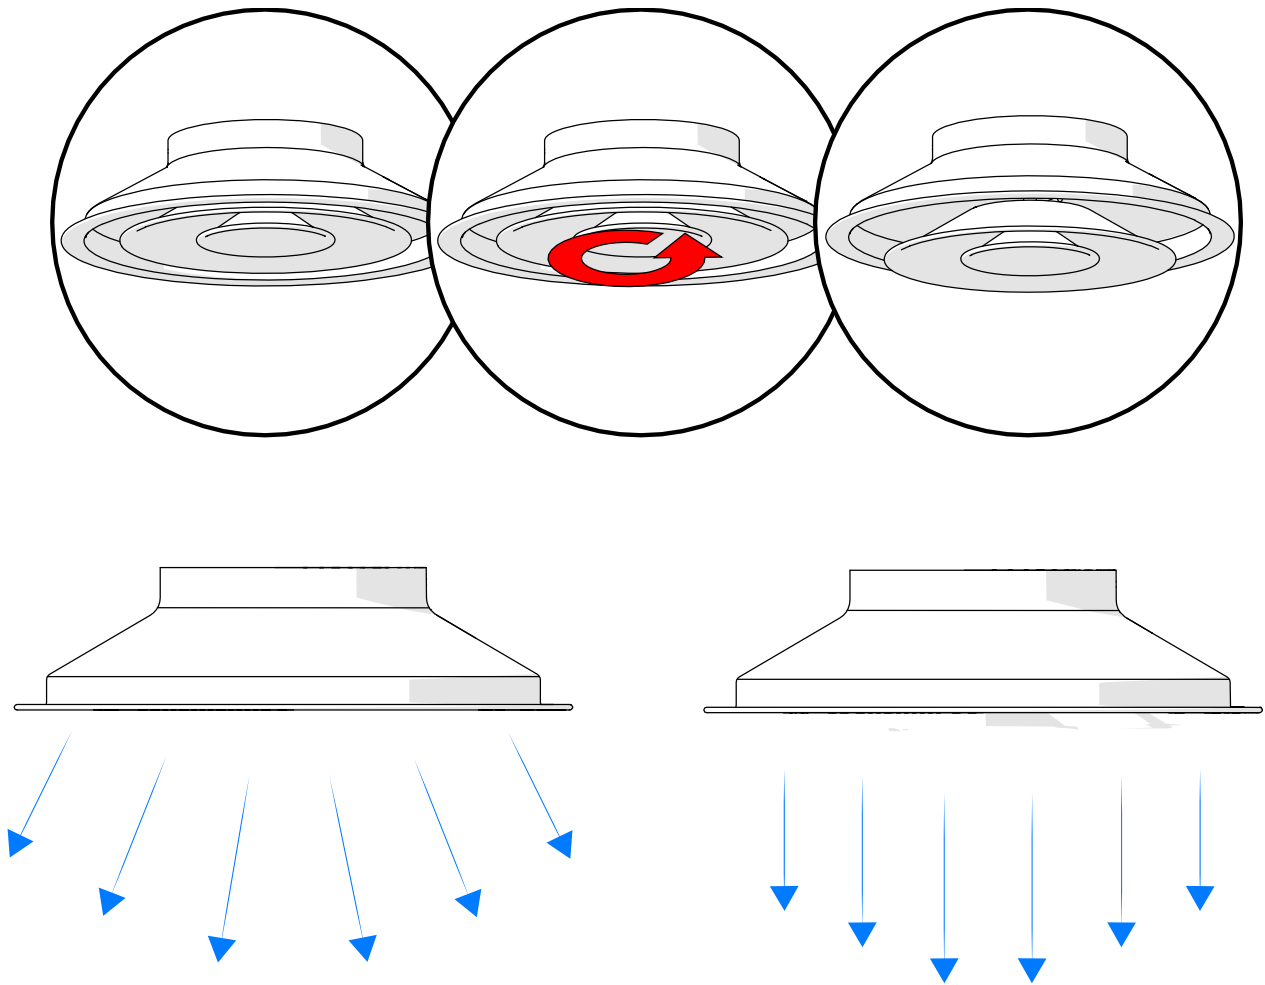

### 4. Minimum distances from T-pieces and duct bends

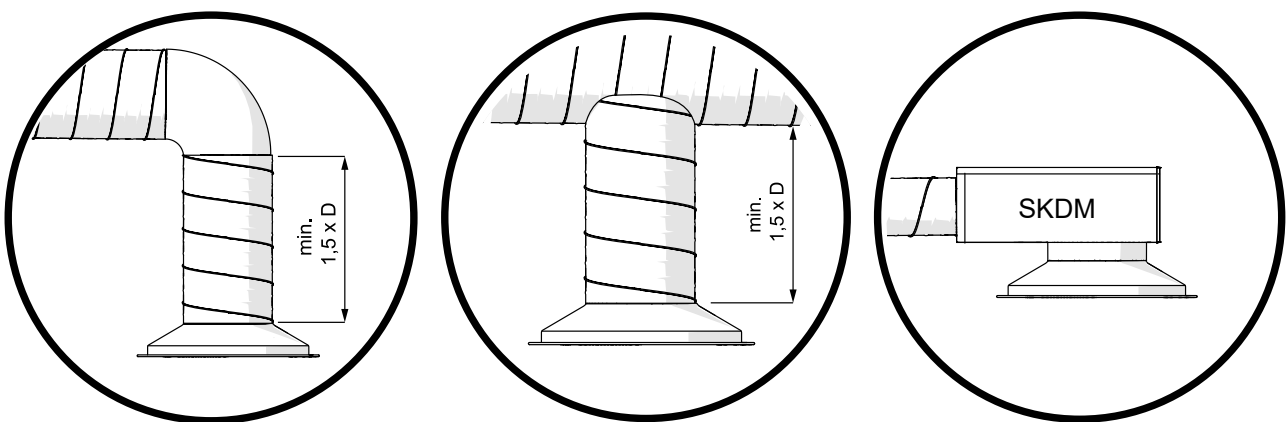

**5. Cleaning**

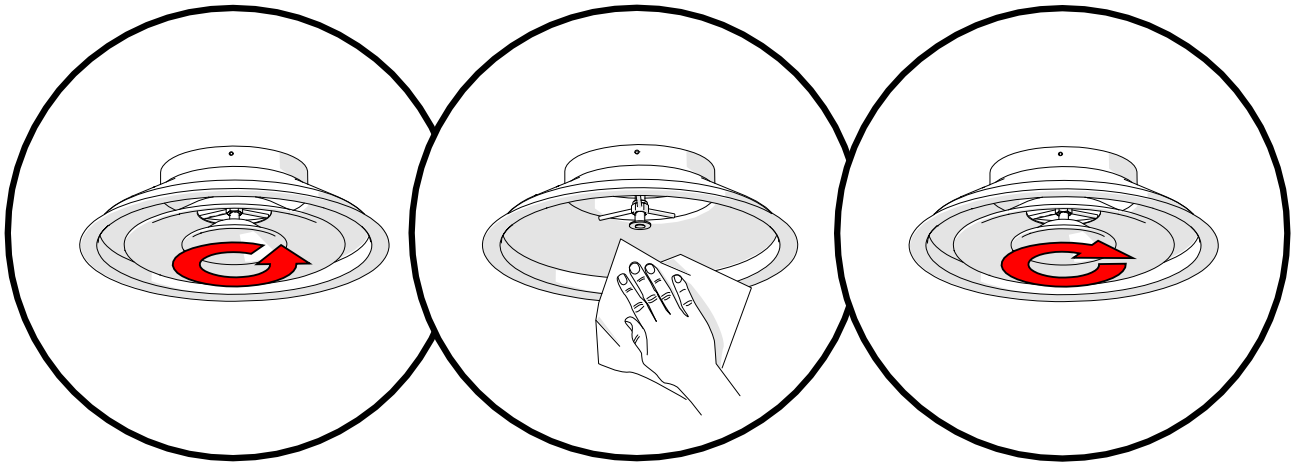



### **ETS NORD AS**

Address: Peterburi tee 53  
11415 Tallinn  
Estonia

Phone: +372 680 7360  
[info@etsnord.ee](mailto:info@etsnord.ee)  
[www.etsnord.ee](http://www.etsnord.ee)

### **ETS NORD Finland**

Address: Pakkasraitti 4  
04360 Tuusula  
Finland

Phone: +358 40 184 2842  
[info@etsnord.fi](mailto:info@etsnord.fi)  
[www.etsnord.fi](http://www.etsnord.fi)

### **ETS NORD Sweden**

Address: Järsjögatan 7  
692 35 Kumla  
Sweden

Phone: +46 19 554 20 50

Address: Pinjegatan 5  
213 63 Malmö  
Sweden

Phone: +46 40 94 68 70


Address: Förrådsvägen 5  
151 58 Södertälje  
Sweden

Phone: +46 8 550 301 40

[info@etsnord.se](mailto:info@etsnord.se)  
[www.etsnord.se](http://www.etsnord.se)

### **ETS NORD International**

[info@etsnord.com](mailto:info@etsnord.com)  
[www.etsnord.com](http://www.etsnord.com)

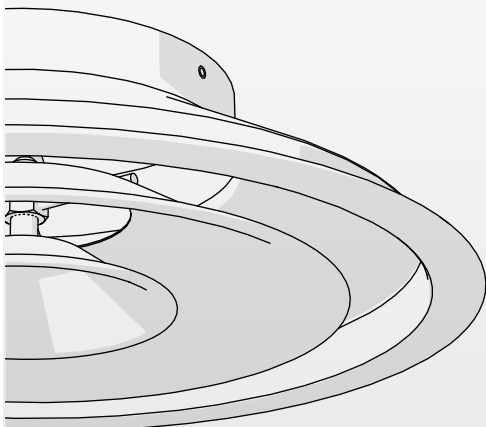

*Let's move the air together!*