


NORDdiffuser
DKC asennusohje


1. DKC mitat

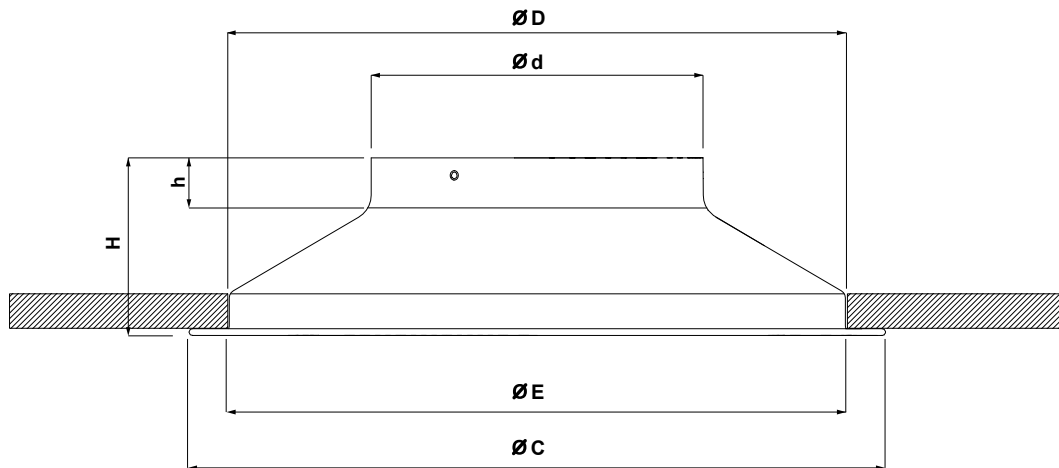


Nimellismitat	Ød	ØE	ØC	h	H	ØD
160	157	280	335	45	105	288
200	198	360	423	48	118	370
250	248	445	517	48	130	461
315	313	560	640	48	146	576
400	398	680	776	65	185	700
500	498	805	917	65	185	825
630	628	943	1045	65	185	963

2. Asennus


2.1 Liittäminen kanavaan

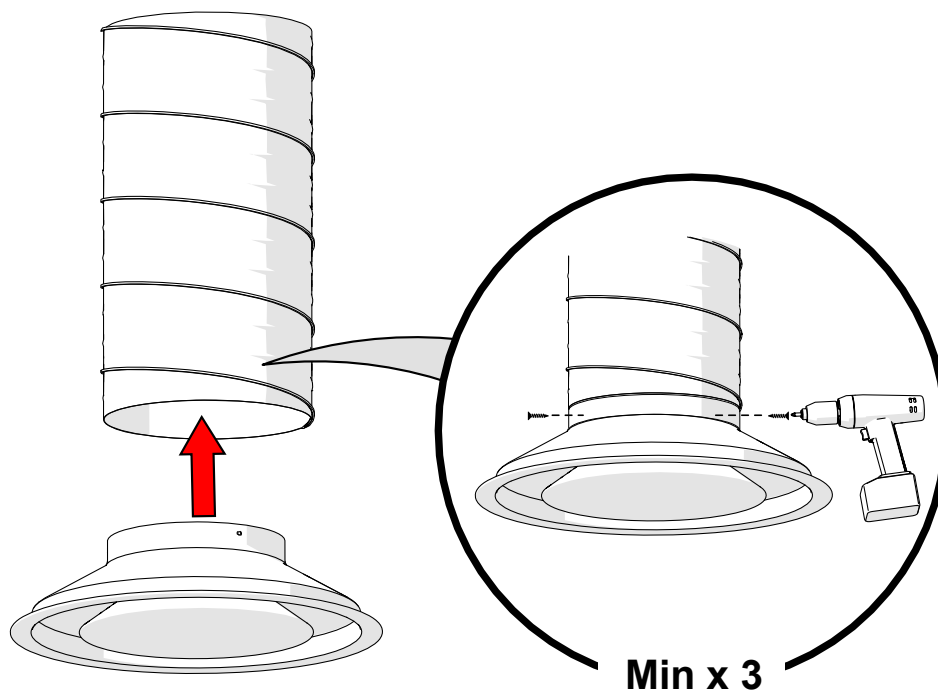


2.2 Liittäminen KRI mittaus- ja säätöpeltiin

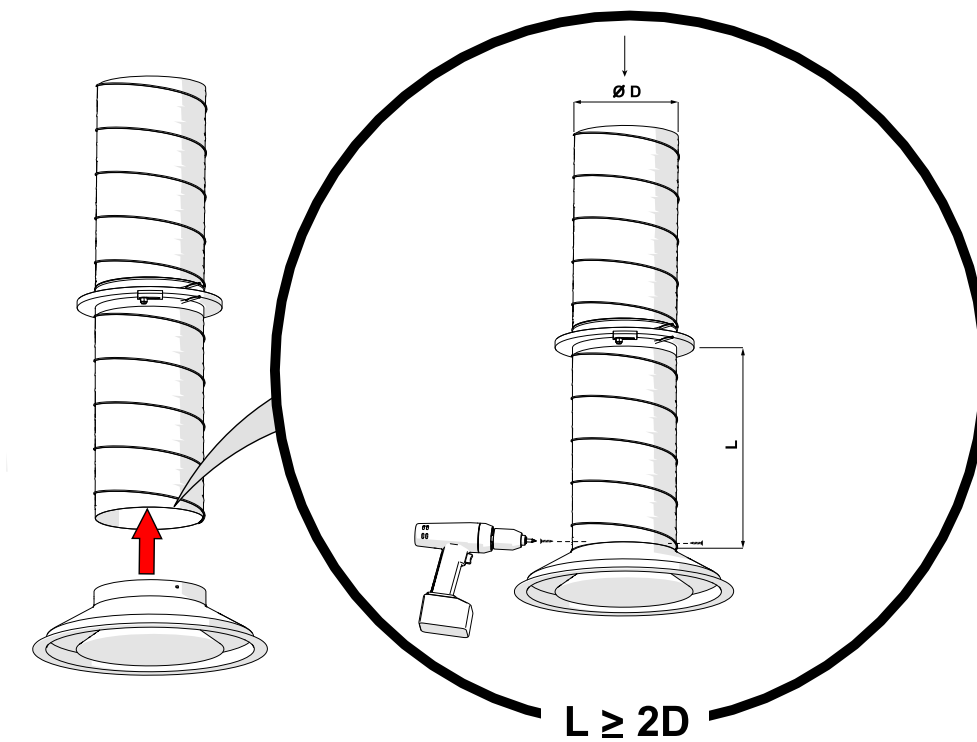


2.3 Liittäminen paineentasauslaatikkoon

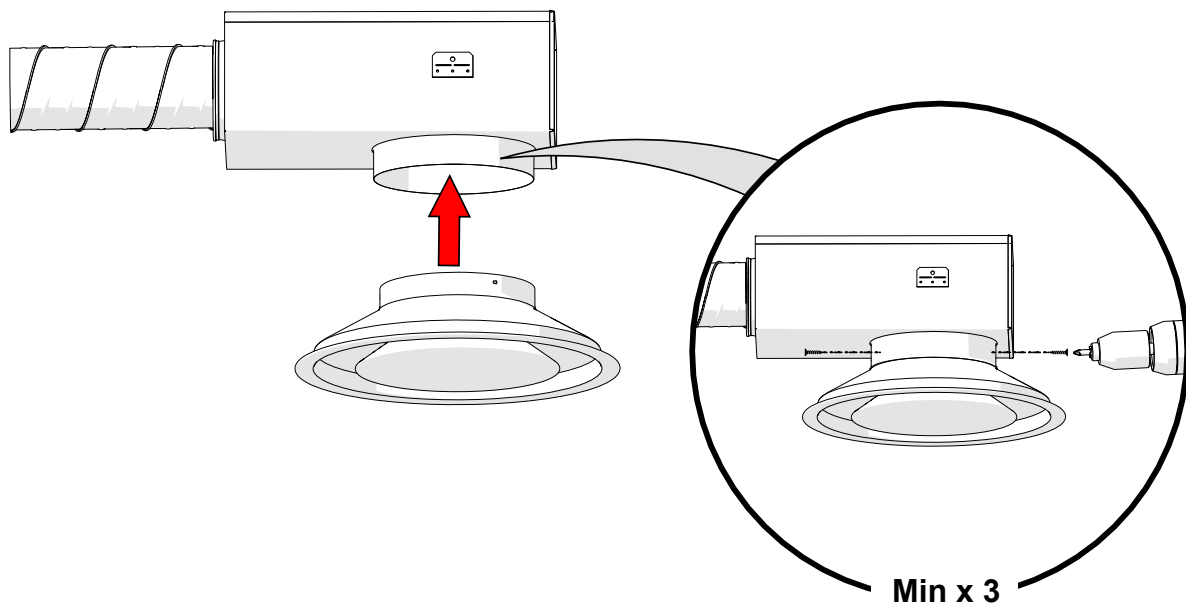


3. Säätöohje

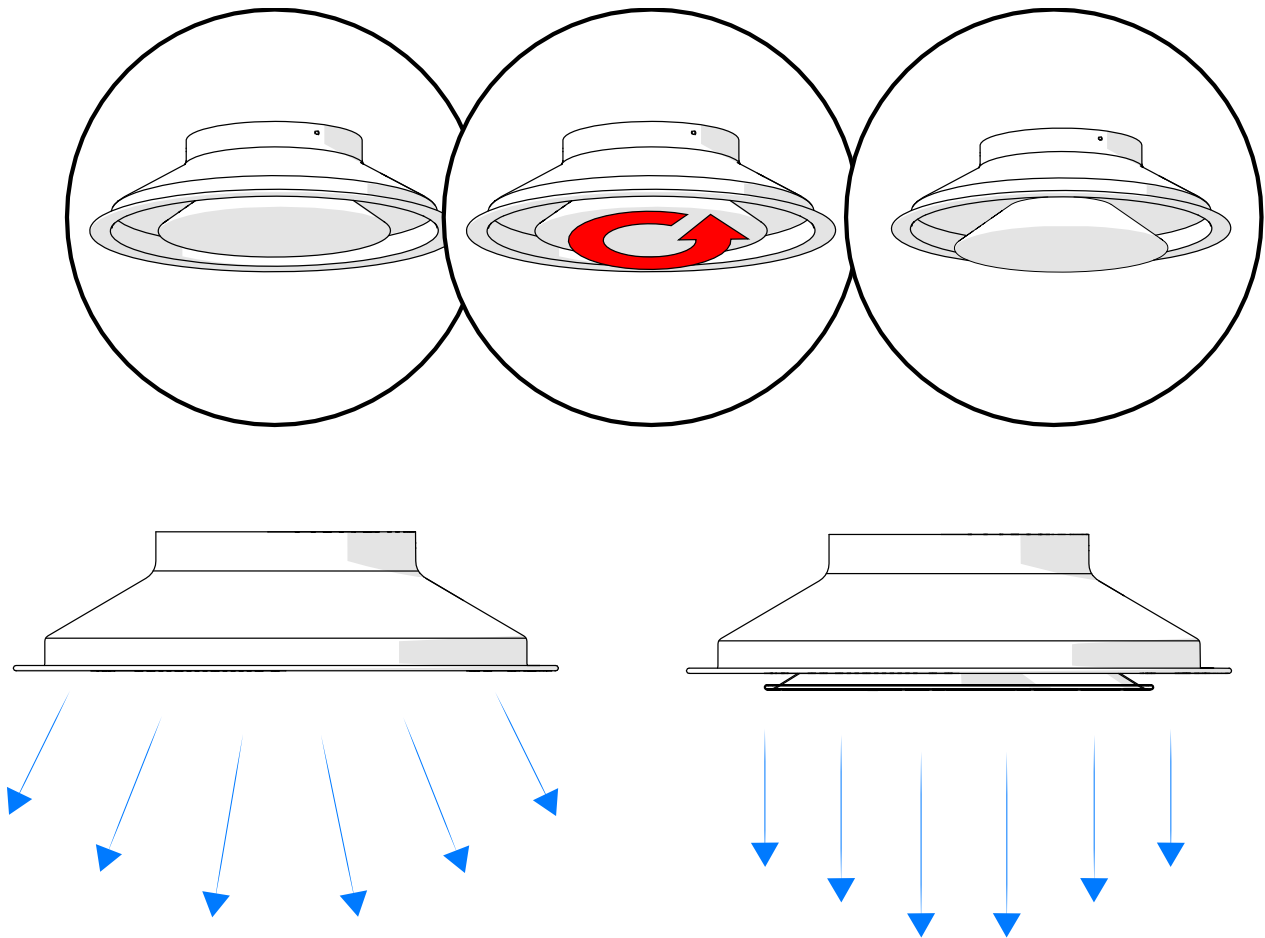

4. Vähimmäisetäisyydet T-yhteestä ja käyrästä

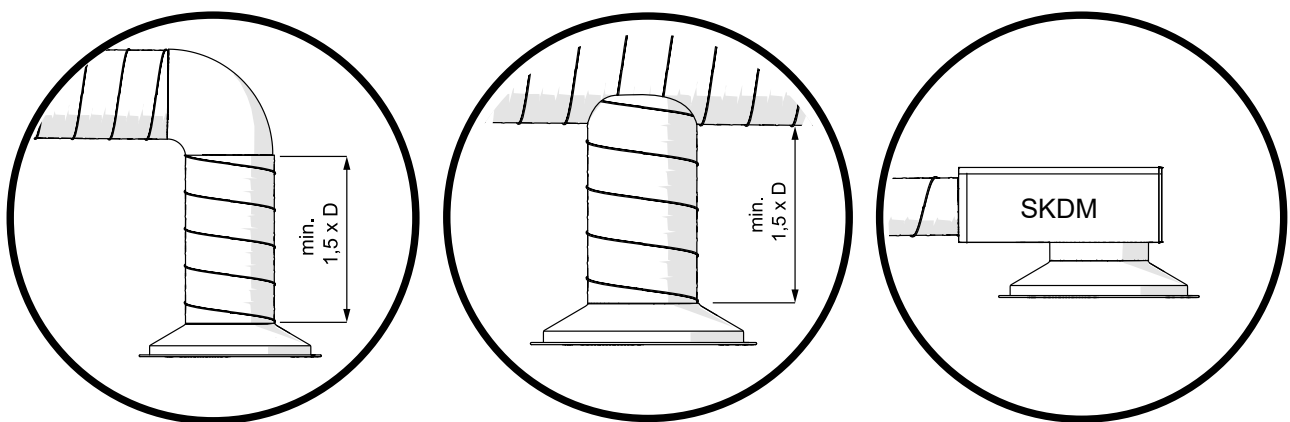

5. Puhdistus

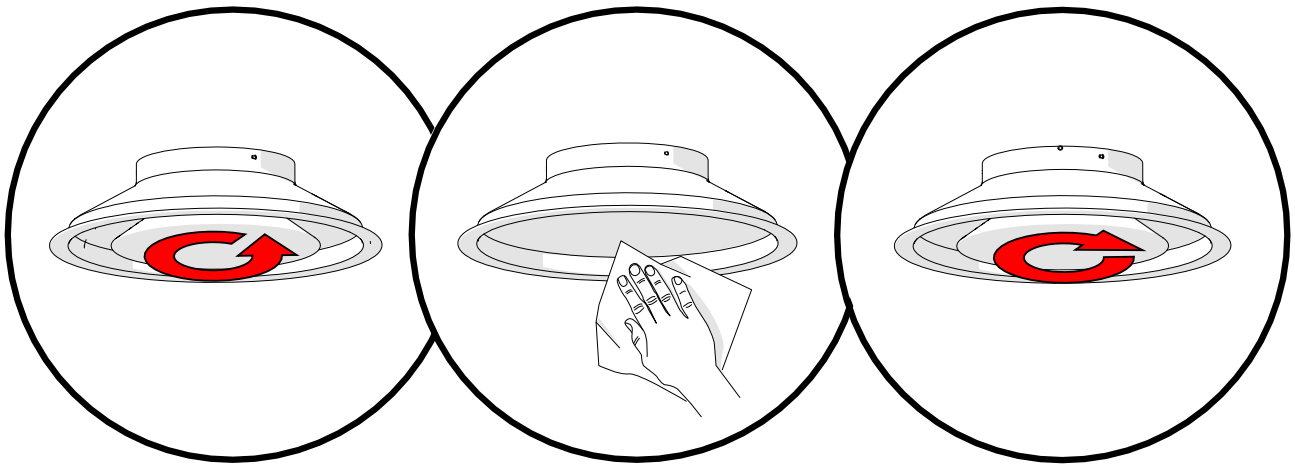




ETS NORD AS Suomi

Osoite: Pakkasraitti 4
04360 Tuusula
Suomi

Puhelin: +358 40 184 2842
info@etsnord.fi
www.etsnord.fi

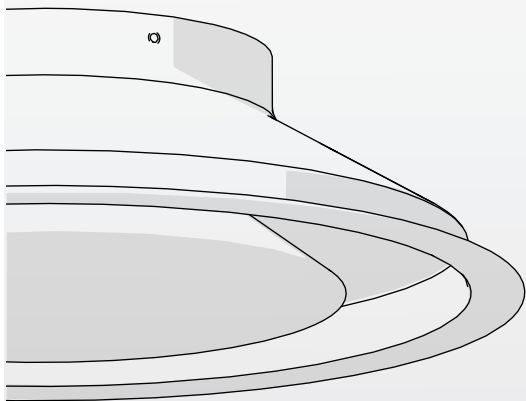

*Let's move the air **together!***