


**RSV General Grille**

RSV is an exhaust air grille with adjustable horizontal blades (blades adjustable in one direction). Designed to use in the exhaust ventilation system.

- Adjustable horizontal blades.
- Removable grille allows for easy cleaning both the grille and the duct.
- Can be manufactured in modules.

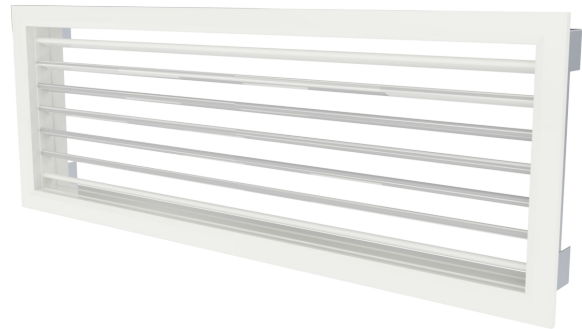

**Application**

RSV – Adjustable horizontal blades. Mainly used for exhaust air.


RSK – Mounting frame. For installing grille to duct.

**Structure and Dimensions**


Manufactured of aluminum profiles. Good torsional stiffness and adjustability because of welded frame and riveted bars. Mounting frame manufactured of galvanized steel.

Standard colour white (RAL 9003). Other RAL colours available.


The minimum size of the RSV general grille is 75×75 mm and the maximum 2000×1000 mm.

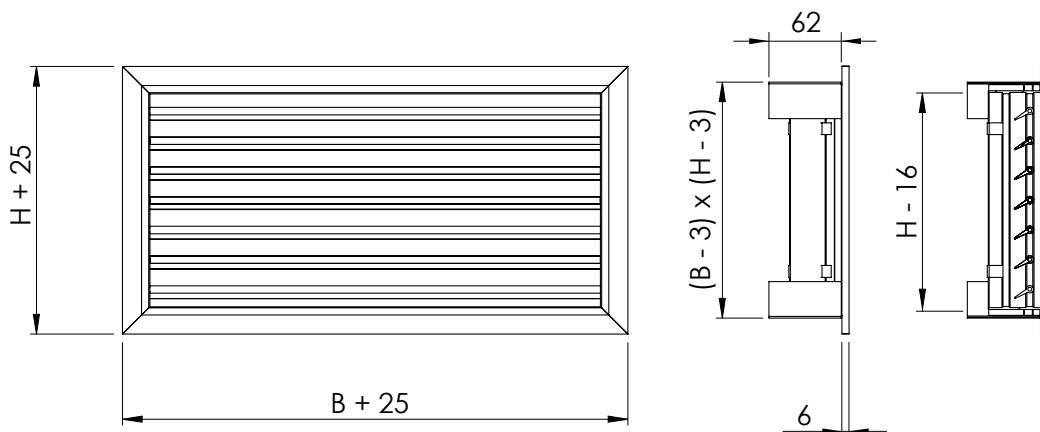


**Technical Data**

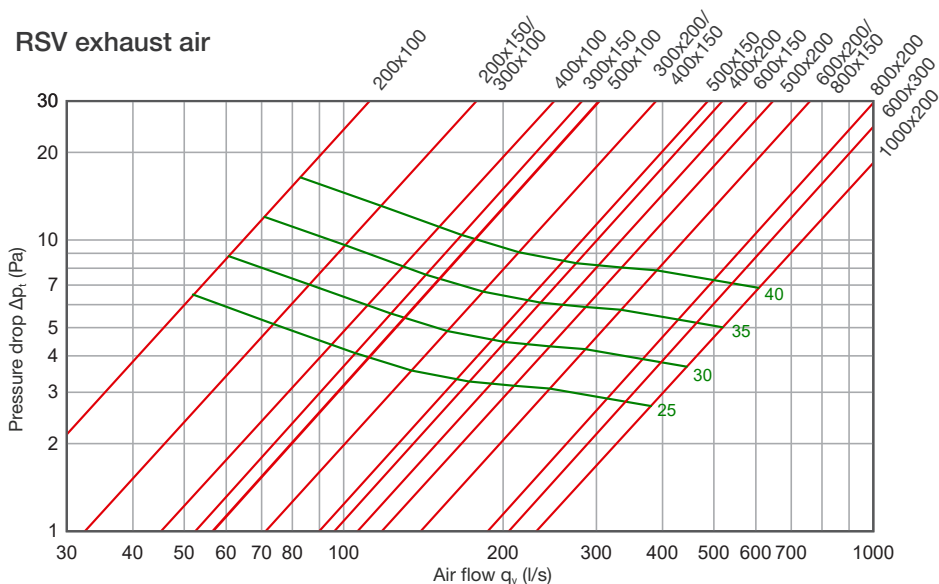


**RSV+MRO Exhaust Air: Air Flow – Pressure Drop**

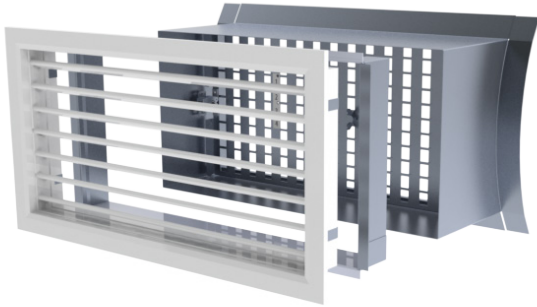


**RSV 200x100 +MRO**

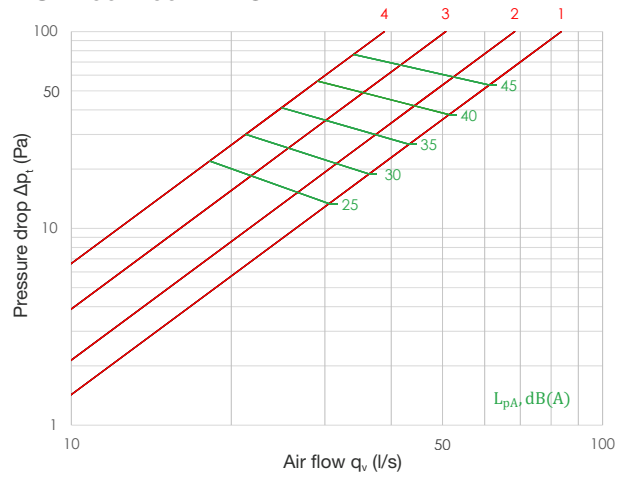


**RSV 200x150 +MRO**

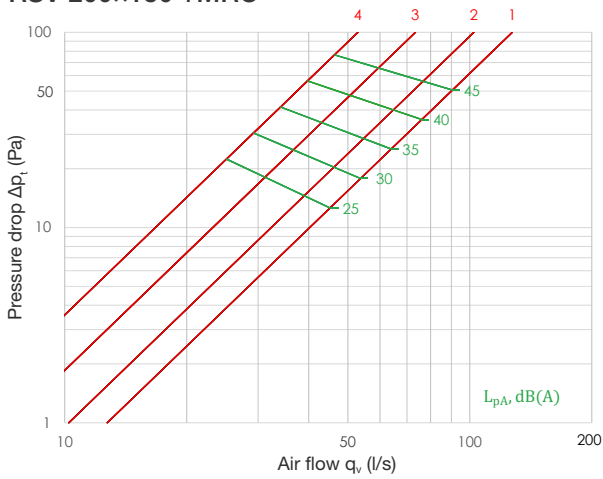


**RSV 300x100 +MRO**

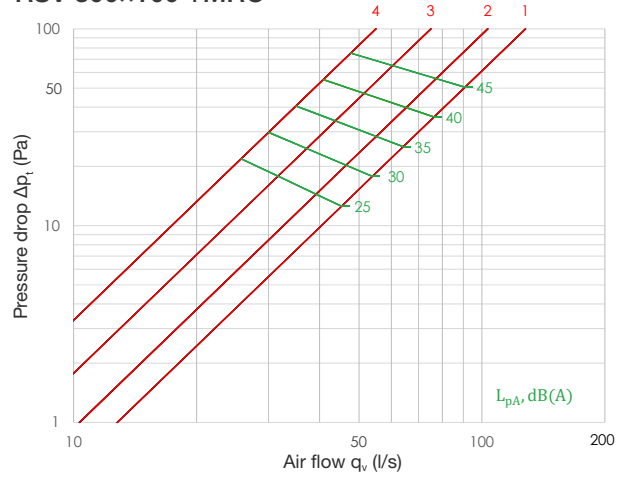


**RSV 300x150 +MRO**

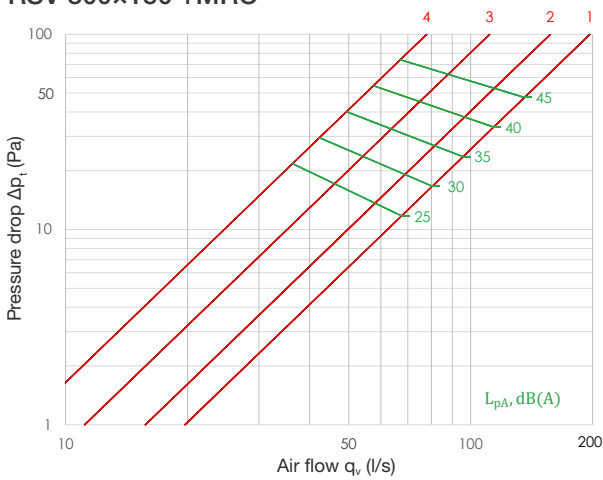


**RSV 300x200 +MRO**

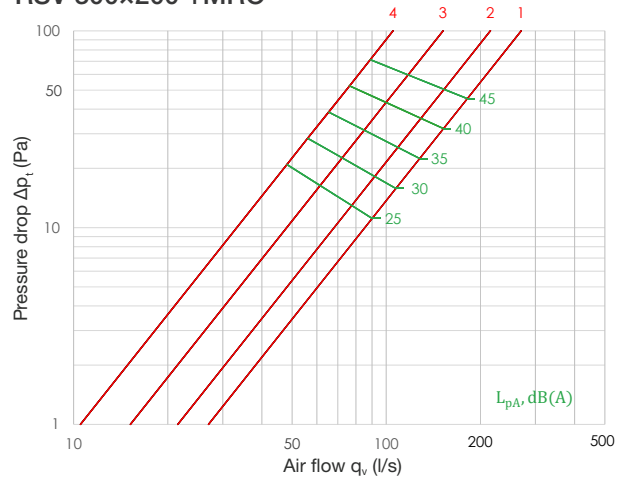


**RSV 400x100 +MRO**

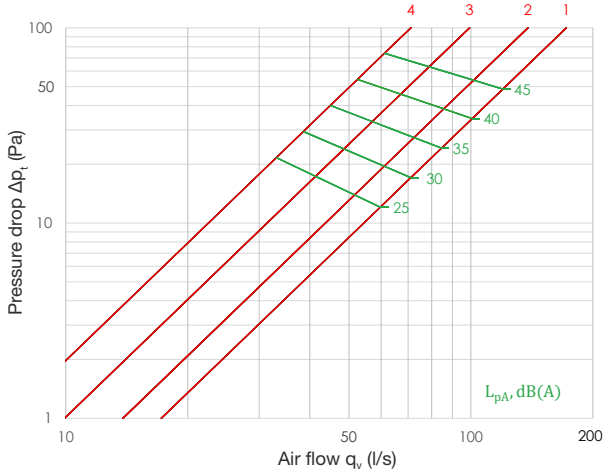


**RSV 400x150 +MRO**

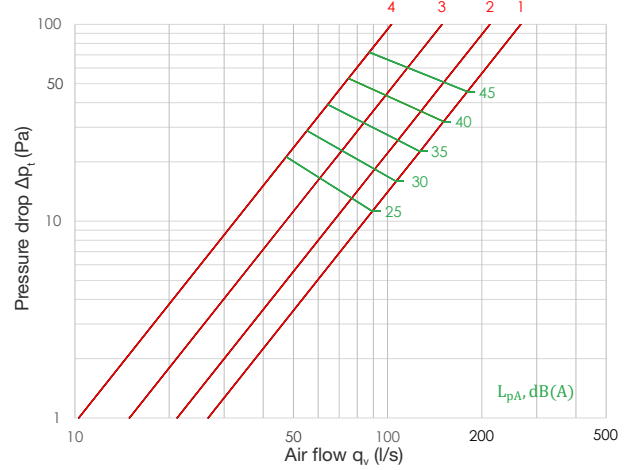


**RSV 400x200 +MRO**

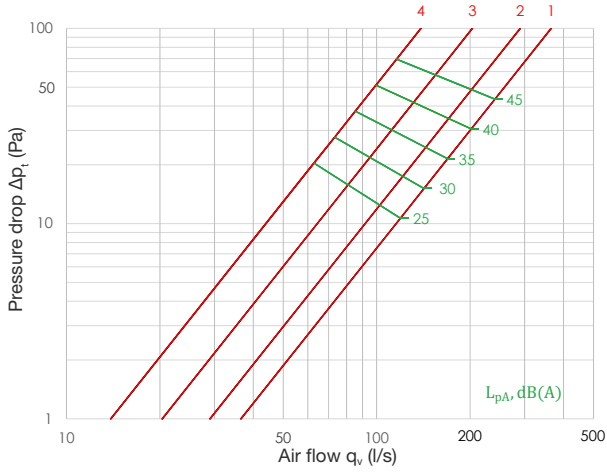


**RSV 500x100 +MRO**

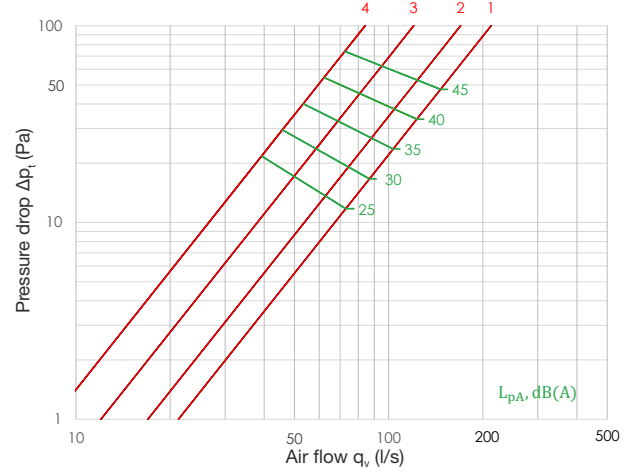


**RSV 500x150 +MRO**

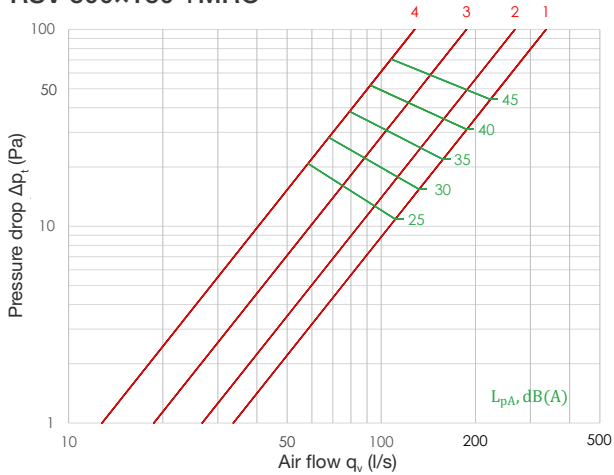


**RSV 500x200 +MRO**

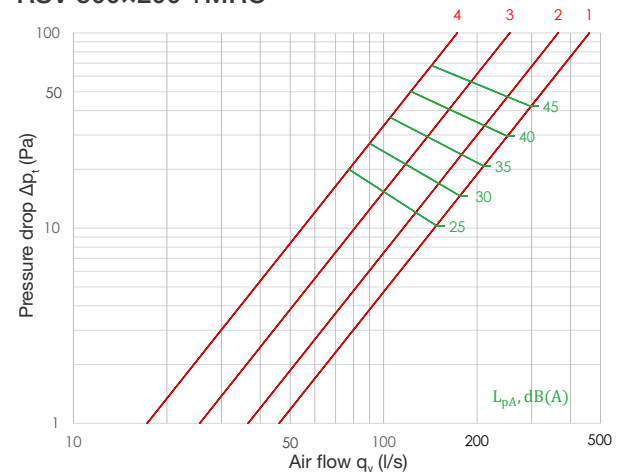


**RSV 600x150 +MRO**

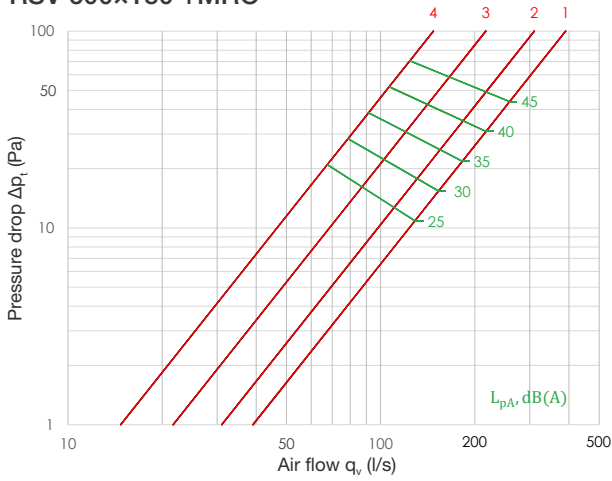


**RSV 600x200 +MRO**

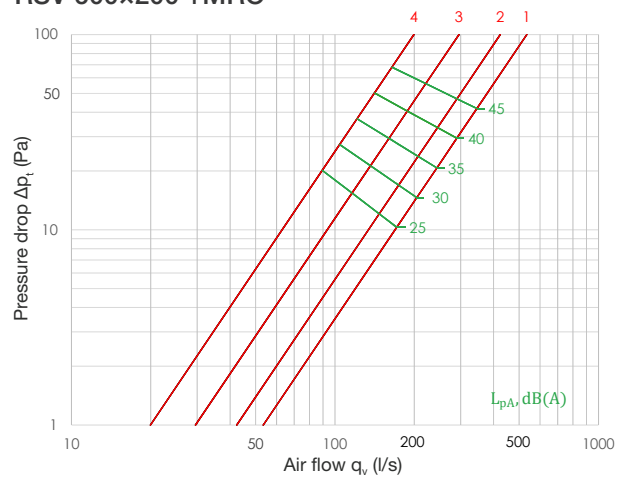


**RSV 600x300 +MRO**

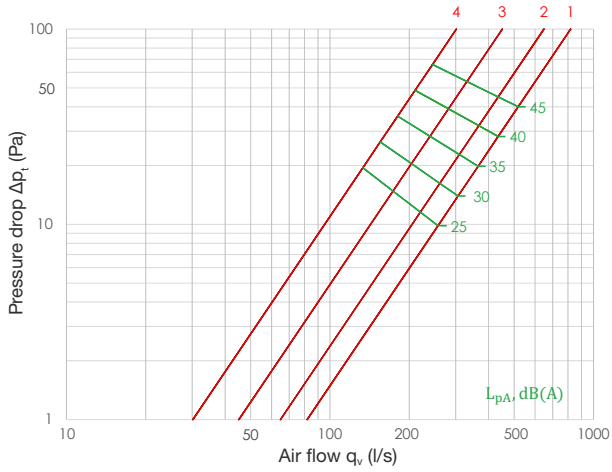


**RSV 800x150 +MRO**

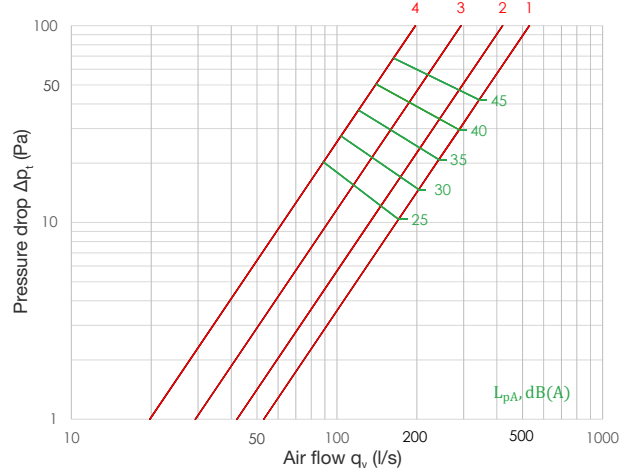


**RSV 800x200 +MRO**

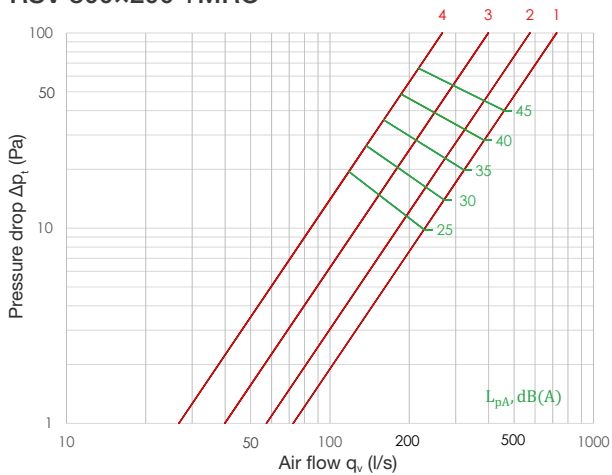


**RSV 1000x200 +MRO**

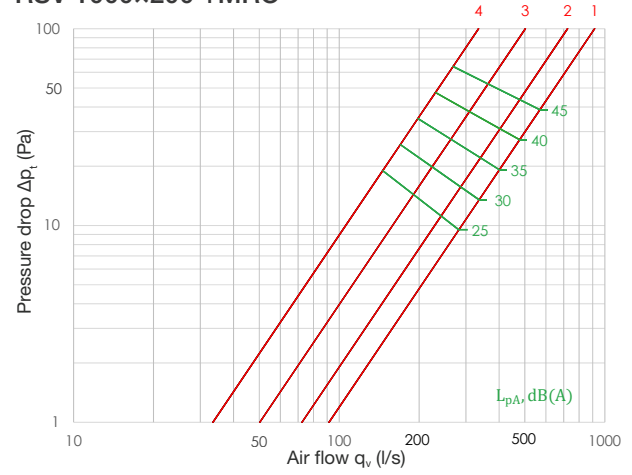


**RSV+SKRM Exhaust Air: Air Flow – Pressure Drop**

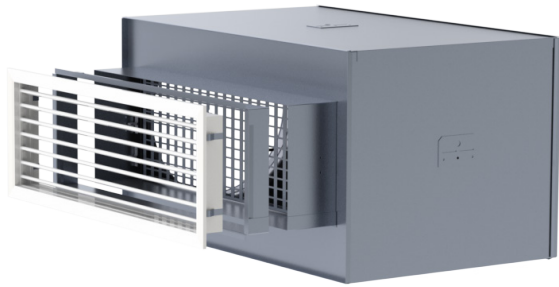


**RSV 200x100 +SKRM**

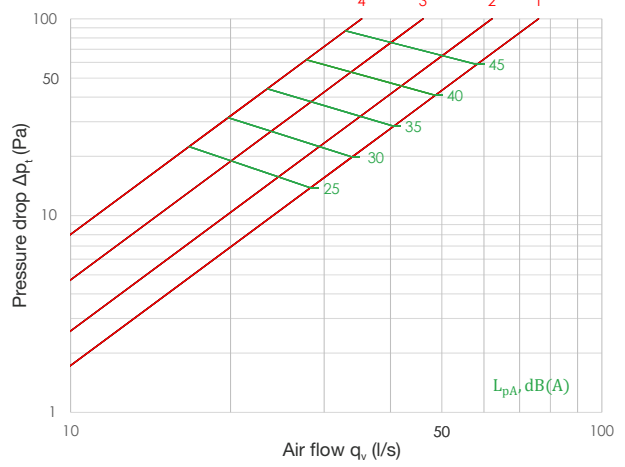


**RSV 200x150 +SKRM**

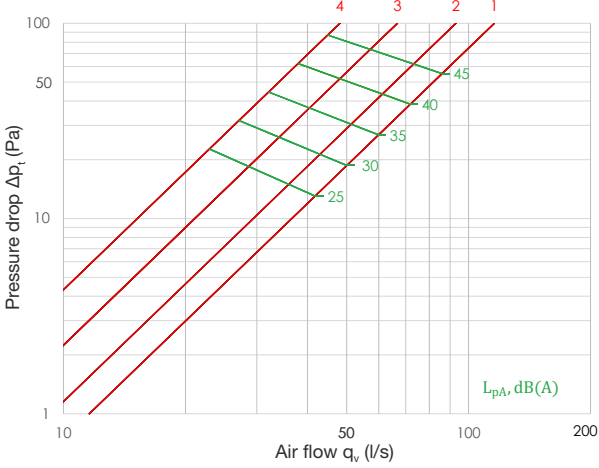


**RSV 300x100 +SKRM**

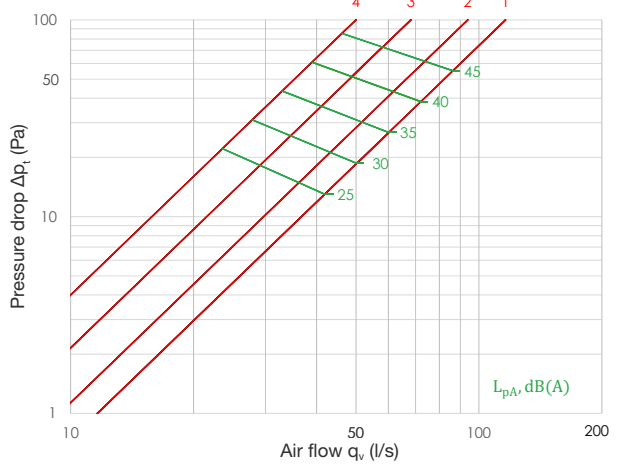


**RSV 300x150 +SKRM**

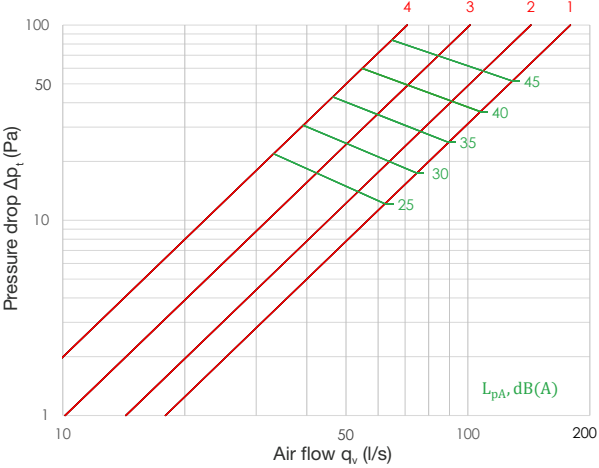


**RSV 300x200 +SKRM**

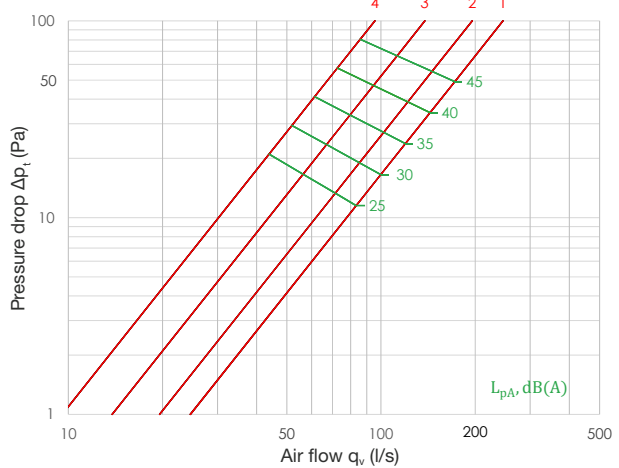


**RSV 400x100 +SKRM**

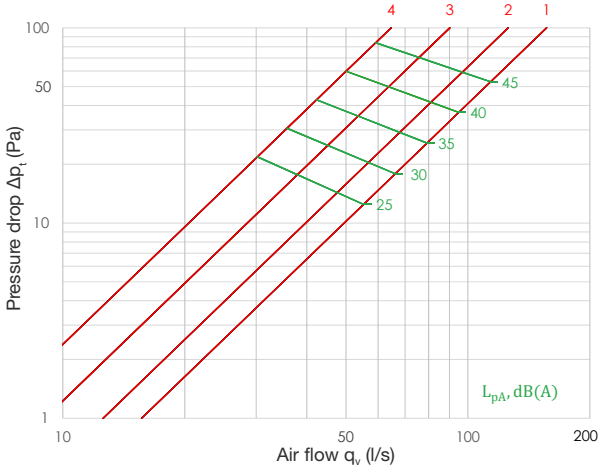


**RSV 400x150 +SKRM**

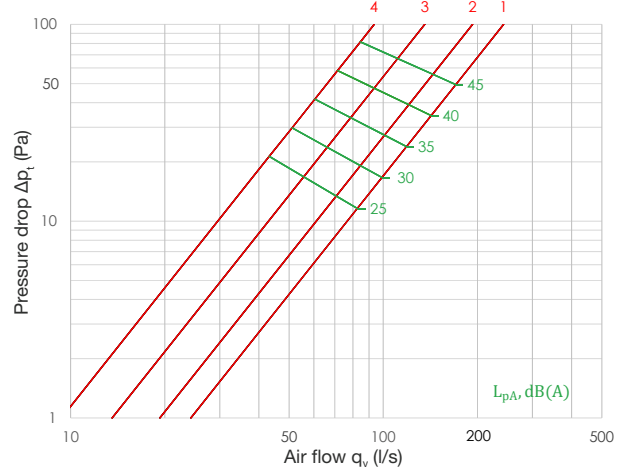


**RSV 400x200 +SKRM**

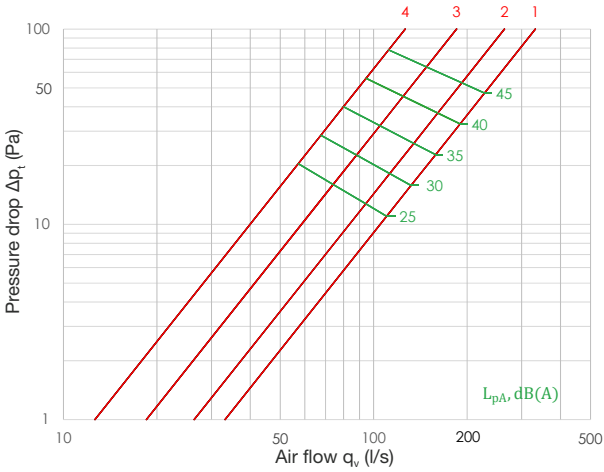


**RSV 500x100 +SKRM**

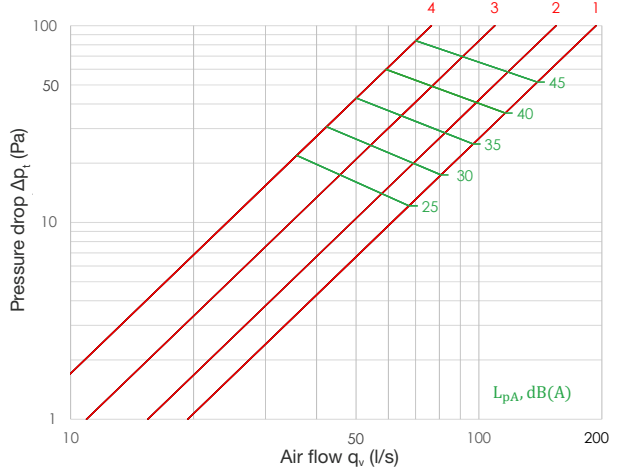


**RSV 500x150 +SKRM**

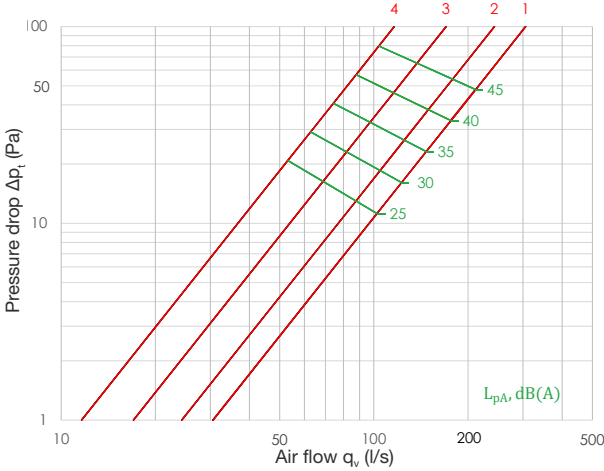


**RSV 500x200 +SKRM**

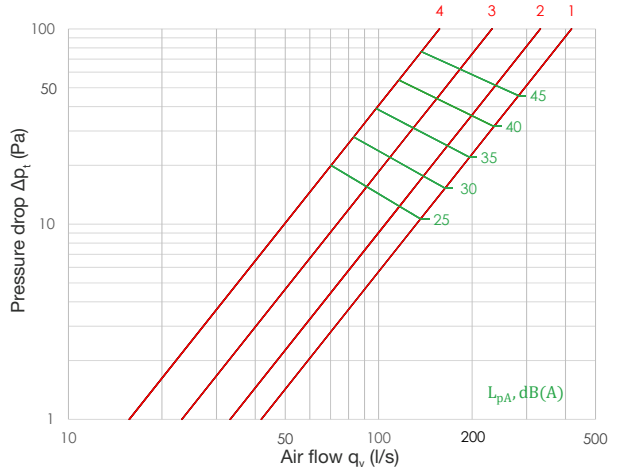


**RSV 600x150 +SKRM**

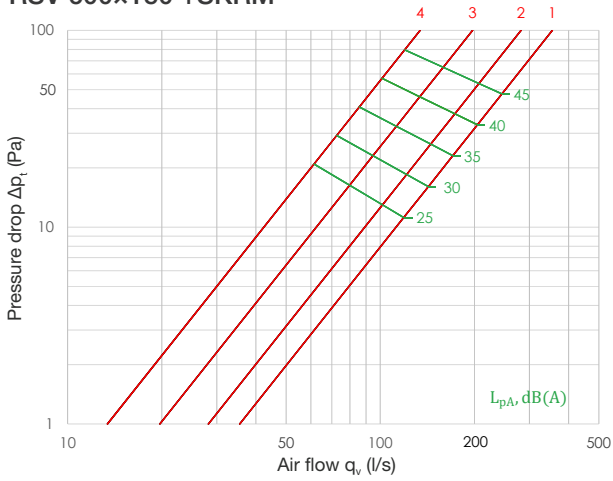


**RSV 600x200 +SKRM**

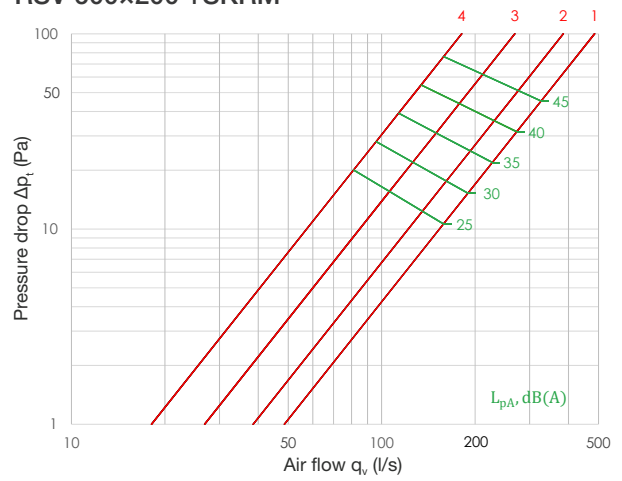


**RSV 600x300 +SKRM**

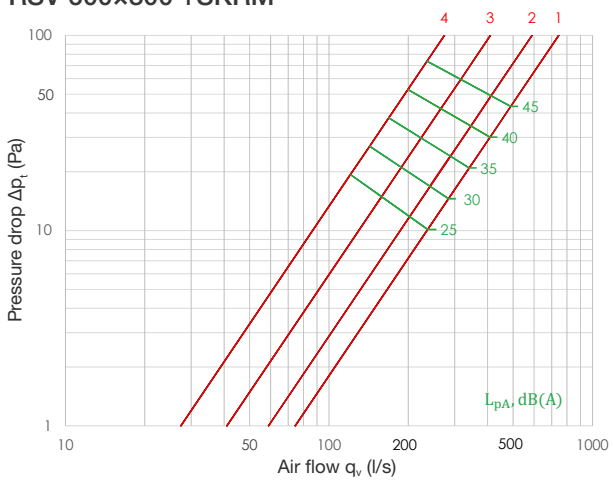


**RSV 800x150 +SKRM**

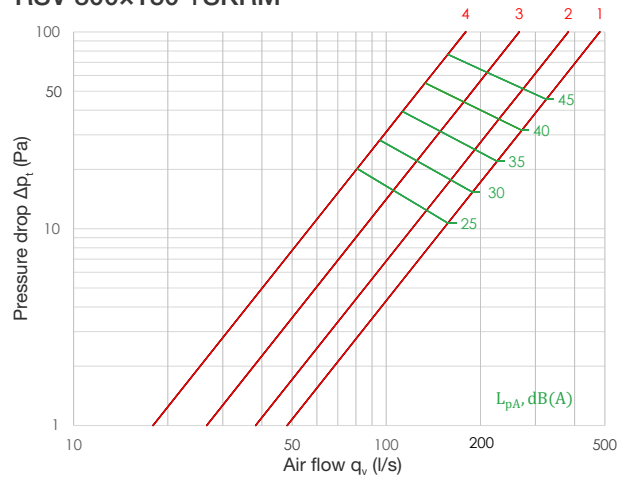

**RSV 800x200 +SKRM**

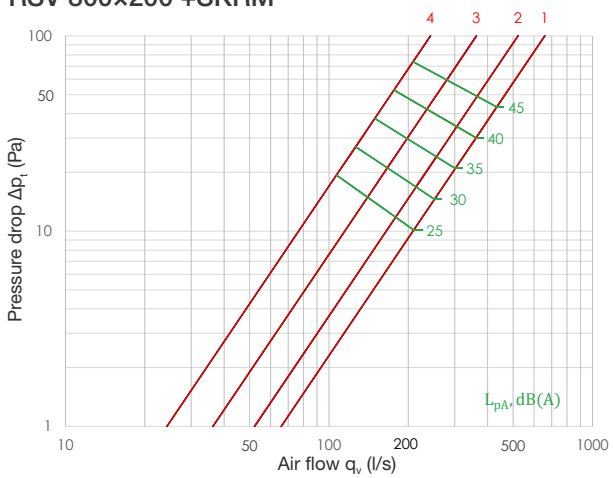

**RSV 1000x200 +SKRM**

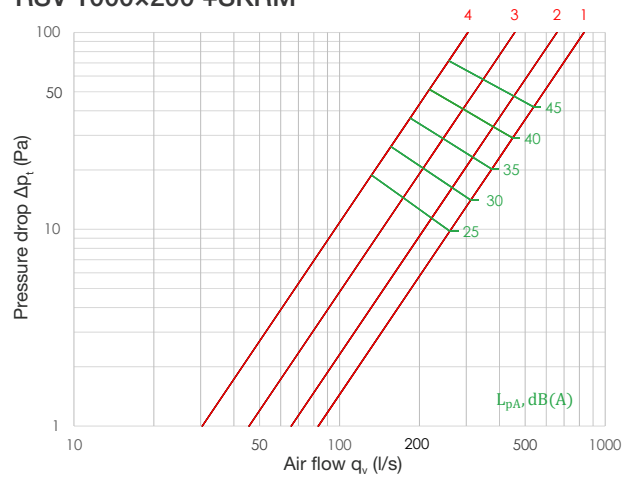

## Sound Attenuation (dB)

RSV+MRO exhaust air										
Grille size	Position	K-value	Mean frequency of octave band (Hz)							
			63	125	250	500	1000	2000	4000	8000
200×100	s = 1	3,4	-6	-2	-1	-3	-6	-8	-16	-22
	s = 2	4,4	-5	1	1	-1	-5	-12	-18	-23
	s = 3	5,9	-5	2	2	-1	-5	-14	-21	-26
	s = 4	7,2	-6	1	1	-2	-6	-14	-23	-31
200×150	s = 1	4,7	-6	-3	-2	-3	-6	-7	-15	-22
	s = 2	6,4	-5	1	1	-1	-5	-11	-18	-23
	s = 3	8,8	-5	2	2	-1	-5	-14	-21	-26
	s = 4	11,0	-6	1	0	-3	-6	-14	-24	-31
300×100	s = 1	4,9	-6	-2	-1	-3	-6	-8	-16	-22
	s = 2	6,5	-5	1	1	-1	-5	-11	-18	-23
	s = 3	8,9	-5	2	2	-1	-5	-14	-21	-26
	s = 4	11,1	-6	1	0	-3	-6	-14	-24	-31
300×150	s = 1	7,0	-6	-3	-2	-4	-6	-7	-15	-22
	s = 2	9,7	-5	1	1	-1	-5	-11	-18	-23
	s = 3	13,6	-5	2	2	-1	-5	-14	-21	-26
	s = 4	17,1	-6	0	0	-3	-6	-13	-24	-32
300×200	s = 1	9,4	-6	-3	-2	-3	-6	-7	-15	-22
	s = 2	13,2	-5	1	1	-1	-5	-12	-18	-23
	s = 3	18,6	-5	2	2	-1	-5	-14	-22	-27
	s = 4	23,4	-6	0	-1	-4	-7	-13	-24	-33
400×100	s = 1	6,3	-6	-3	-2	-3	-6	-7	-15	-22
	s = 2	8,6	-5	1	1	-1	-5	-11	-18	-23
	s = 3	11,9	-5	2	2	-1	-5	-14	-21	-26
	s = 4	14,9	-6	0	0	-3	-6	-14	-24	-32
400×150	s = 1	9,2	-6	-3	-2	-4	-7	-7	-15	-22
	s = 2	13,0	-5	1	1	-1	-5	-11	-18	-23
	s = 3	18,3	-5	2	2	-1	-5	-14	-21	-27
	s = 4	23,1	-6	0	-1	-4	-7	-13	-24	-33
400×200	s = 1	12,4	-6	-3	-2	-4	-6	-7	-15	-22
	s = 2	17,7	-5	1	1	-1	-5	-12	-18	-23
	s = 3	25,1	-5	2	2	-1	-5	-14	-22	-27
	s = 4	31,7	-6	-1	-1	-4	-7	-13	-25	-34
500×100	s = 1	7,7	-6	-3	-2	-4	-6	-7	-15	-22
	s = 2	10,7	-5	1	1	-1	-5	-11	-18	-23
	s = 3	15,0	-5	2	2	-1	-5	-14	-21	-26
	s = 4	18,9	-6	0	0	-3	-6	-13	-24	-32
500×150	s = 1	11,4	-6	-3	-2	-4	-7	-7	-15	-22
	s = 2	16,3	-5	1	1	-1	-5	-11	-18	-23
	s = 3	23,1	-5	2	2	-1	-5	-14	-21	-27
	s = 4	29,2	-6	0	-1	-4	-7	-13	-24	-33
500×200	s = 1	15,4	-6	-3	-2	-4	-6	-7	-15	-22
	s = 2	22,2	-5	1	1	-1	-5	-12	-18	-23
	s = 3	31,6	-5	2	2	-1	-5	-14	-22	-27
	s = 4	40,0	-6	-1	-2	-4	-7	-13	-25	-34
600×150	s = 1	13,2	-6	-3	-2	-4	-7	-6	-15	-22
	s = 2	18,9	-5	0	1	-1	-5	-11	-18	-23
	s = 3	26,8	-5	2	2	-1	-5	-14	-21	-26
	s = 4	33,9	-6	0	0	-3	-6	-13	-24	-32
600×200	s = 1	17,9	-6	-3	-2	-4	-7	-7	-15	-22
	s = 2	25,7	-5	1	1	-1	-5	-11	-18	-23
	s = 3	36,6	-5	2	2	-1	-5	-14	-21	-27
	s = 4	46,4	-6	0	-1	-4	-7	-13	-24	-33
600×300	s = 1	27,1	-6	-3	-2	-4	-7	-7	-15	-22
	s = 2	39,3	-5	1	1	-1	-5	-11	-18	-23
	s = 3	56,1	-5	2	2	-1	-5	-14	-22	-27
	s = 4	71,1	-6	-1	-1	-4	-7	-13	-25	-33
800×150	s = 1	17,7	-6	-3	-2	-4	-7	-6	-15	-22
	s = 2	25,5	-5	1	1	-1	-5	-11	-18	-23
	s = 3	36,3	-5	2	2	-1	-5	-14	-21	-26
	s = 4	46,0	-6	0	-1	-3	-7	-13	-24	-33




RSV+MRO exhaust air										
Grille size	Position	K-value	Mean frequency of octave band (Hz)							
			63	125	250	500	1000	2000	4000	8000
800x200	s = 1	23,9	-6	-3	-2	-4	-7	-7	-15	-22
	s = 2	34,7	-5	1	1	-1	-5	-11	-18	-23
	s = 3	49,6	-5	2	2	-1	-5	-14	-22	-27
	s = 4	62,9	-6	-1	-1	-4	-7	-13	-25	-33
1000x200	s = 1	29,9	-6	-3	-2	-4	-7	-7	-15	-22
	s = 2	43,6	-5	1	1	-1	-5	-11	-18	-23
	s = 3	62,6	-5	2	2	-1	-5	-14	-22	-27
	s = 4	79,4	-6	-1	-1	-4	-7	-13	-25	-34
			± 4 dB	± 4 dB	± 4 dB	± 4 dB	± 4 dB	± 4 dB	± 4 dB	± 4 dB

RSV+SKRM exhaust air										
Grille size	Position	K-value	Mean frequency of octave band (Hz)							
			63	125	250	500	1000	2000	4000	8000
200x100	s = 1	3,2	2	3	1	-3	-5	-12	-18	-23
	s = 2	4,2	4	6	3	-2	-5	-15	-20	-24
	s = 3	5,6	5	8	3	-3	-5	-16	-22	-25
	s = 4	6,9	5	8	0	-6	-5	-15	-22	-25
200x150	s = 1	4,5	2	2	1	-3	-5	-11	-18	-23
	s = 2	6,1	4	6	3	-2	-5	-14	-20	-24
	s = 3	8,4	5	8	3	-3	-5	-16	-22	-25
	s = 4	10,5	5	7	0	-6	-5	-15	-22	-25
300x100	s = 1	4,6	2	3	1	-3	-5	-11	-18	-23
	s = 2	6,2	4	6	3	-2	-5	-14	-20	-24
	s = 3	8,5	5	8	3	-3	-5	-16	-22	-25
	s = 4	10,5	4	7	-1	-6	-5	-15	-21	-25
300x150	s = 1	6,6	2	2	0	-3	-5	-11	-17	-23
	s = 2	9,2	4	6	3	-2	-5	-14	-20	-24
	s = 3	12,9	5	8	2	-3	-5	-16	-22	-25
	s = 4	16,2	4	7	-1	-7	-5	-15	-21	-25
300x200	s = 1	8,9	2	2	1	-3	-5	-11	-18	-23
	s = 2	12,5	4	6	3	-2	-5	-15	-20	-24
	s = 3	17,7	5	8	2	-3	-5	-16	-22	-25
	s = 4	22,3	4	7	-2	-7	-5	-14	-21	-25
400x100	s = 1	6,0	2	2	1	-3	-5	-11	-18	-23
	s = 2	8,2	4	6	3	-2	-5	-14	-20	-24
	s = 3	11,3	5	8	3	-3	-5	-16	-22	-25
	s = 4	14,2	4	7	-1	-6	-5	-15	-21	-25
400x150	s = 1	8,7	1	2	0	-3	-5	-11	-17	-23
	s = 2	12,3	4	6	3	-2	-5	-14	-20	-24
	s = 3	17,4	5	8	2	-3	-5	-16	-22	-25
	s = 4	22,0	4	7	-2	-7	-5	-14	-21	-25
400x200	s = 1	11,7	2	2	1	-3	-5	-11	-17	-23
	s = 2	16,8	4	6	3	-2	-5	-15	-20	-24
	s = 3	23,8	5	8	2	-4	-5	-16	-22	-25
	s = 4	30,1	4	7	-2	-8	-5	-14	-21	-24
500x100	s = 1	7,3	2	2	0	-3	-5	-11	-17	-23
	s = 2	10,2	4	6	3	-2	-5	-14	-20	-24
	s = 3	14,2	5	8	2	-3	-5	-16	-22	-25
	s = 4	17,9	4	7	-1	-7	-5	-15	-21	-25
500x150	s = 1	10,8	1	2	0	-4	-5	-11	-17	-23
	s = 2	15,4	4	6	3	-2	-5	-14	-20	-24
	s = 3	21,9	5	8	2	-3	-5	-16	-22	-25
	s = 4	27,7	4	7	-2	-7	-5	-14	-21	-25
500x200	s = 1	14,6	2	2	0	-3	-5	-11	-17	-23
	s = 2	21,0	4	6	3	-2	-5	-15	-20	-24
	s = 3	30,0	5	8	2	-4	-5	-16	-22	-25
	s = 4	38,0	4	7	-3	-8	-5	-14	-21	-24
600x150	s = 1	12,5	1	2	0	-4	-5	-10	-17	-23
	s = 2	17,9	4	5	3	-2	-5	-14	-20	-24
	s = 3	25,5	5	8	3	-3	-5	-16	-22	-25
	s = 4	32,2	4	7	-1	-6	-5	-15	-21	-25

RSV+SKRM exhaust air										
Grille size	Position	K-value	Mean frequency of octave band (Hz)							
			63	125	250	500	1000	2000	4000	8000
600×200	s = 1	16,9	1	2	0	-4	-5	-10	-17	-23
	s = 2	24,4	4	6	3	-2	-5	-14	-20	-24
	s = 3	34,8	5	8	2	-3	-5	-16	-22	-25
	s = 4	44,0	4	7	-2	-7	-5	-14	-21	-25
600×300	s = 1	25,6	1	2	0	-4	-5	-10	-17	-23
	s = 2	37,2	4	6	3	-2	-5	-14	-20	-24
	s = 3	53,3	5	8	2	-3	-5	-16	-22	-25
	s = 4	67,6	4	7	-2	-7	-5	-14	-21	-25
800×150	s = 1	16,8	1	2	0	-4	-5	-10	-17	-23
	s = 2	24,2	4	6	3	-2	-5	-14	-20	-24
	s = 3	34,5	5	8	2	-3	-5	-16	-22	-25
	s = 4	43,7	4	7	-2	-7	-5	-14	-21	-25
800×200	s = 1	22,6	1	2	0	-4	-5	-10	-17	-23
	s = 2	32,9	4	6	3	-2	-5	-14	-20	-24
	s = 3	47,1	5	8	2	-3	-5	-16	-22	-25
	s = 4	59,8	4	7	-2	-7	-5	-14	-21	-25
1000×200	s = 1	28,4	1	2	0	-4	-5	-10	-17	-23
	s = 2	41,4	4	6	3	-2	-5	-15	-20	-24
	s = 3	59,4	5	8	2	-4	-5	-16	-22	-25
	s = 4	75,5	4	7	-3	-8	-5	-14	-21	-24
			± 4 dB	± 4 dB	± 4 dB	± 4 dB	± 4 dB	± 4 dB	± 4 dB	± 4 dB

**Product Marking**

RSV - B×H - RAL 9003

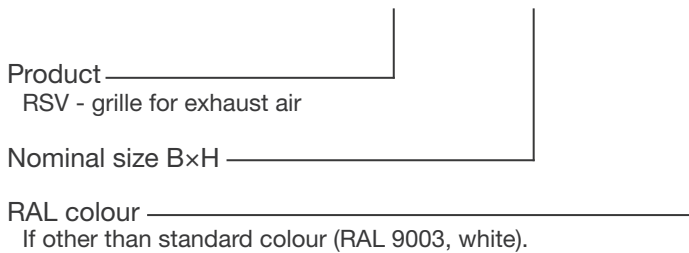

**Example: RSV 500×150**

**Accessories:**

- SKRM - plenum box
- MRO - regulating part

**Installation**

Attach to rectangular duct with mounting frame RSK. Installation to round duct with SKRM plenum box. Wall installation: recommended minimum distance to ceiling 200 mm.

Cleaning: Remove grille from frame carefully, with a screwdriver if needed. Clean parts with a damp cloth. Replace grille.